sauder.com

SAUDER®

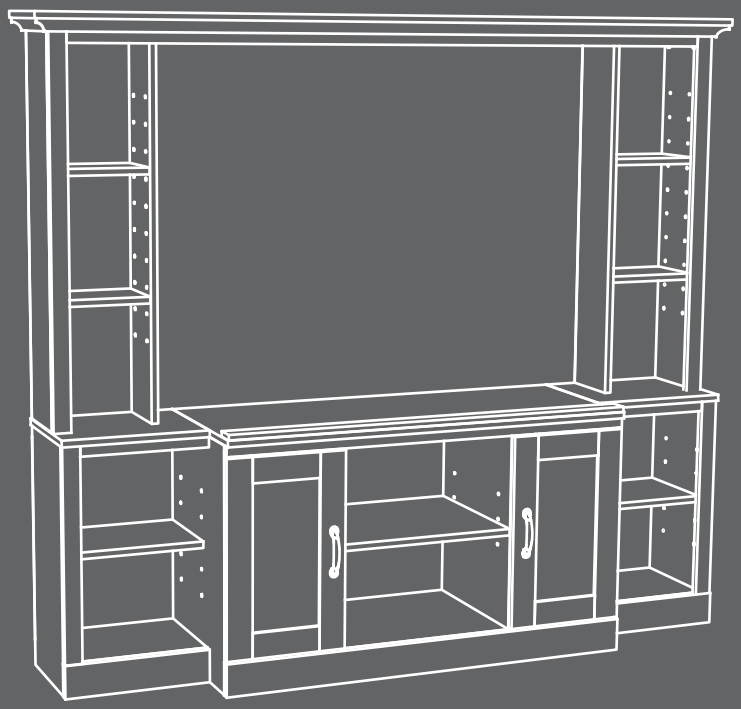

Your **center** of **attention.**

Entertainment/Wall System

403932

Need help? Visit Sauder.com to view video assembly tips or chat with a live rep. Prefer the phone? Call 1-800-523-3987.

Share your journey!

NOTE: THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

English pg 1-28
Français pg 29-33

Lot # **367350** 12/15/14
Purchased: _____

Be sure to give us a ring before making any returns. 1-800-523-3987

Table of Contents

Part Identification	3
Hardware Identification	4
Assembly Steps	5-28
Français	29-33
Safety	34
Warranty	35

Assembly Tools Required

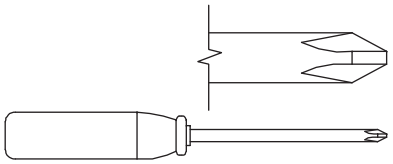

No. 2 Phillips Screwdriver
Tip Shown Actual Size

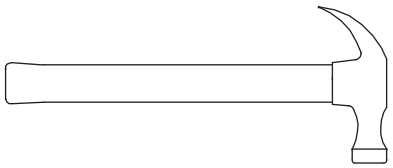

Hammer
Not actual size ☺

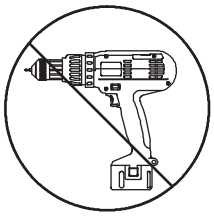

Skip the power trip.
This time.

⚠ WARNING

Use of a TV that is too heavy or large is hazardous. A TV that is too heavy will create a risk of a tip-over that can cause severe injury or death. A TV that is too large for the available space might be accidentally pushed or bumped off the furniture, or subject to tip-over.

- Check the size and weight of your TV. Compare it to the diagram below – **before you begin assembly!**
- This Sauder unit is designed for use with televisions weighing less than 95 pounds. **Never** use with a TV that weighs more.
- The size of the television, front-to-back and side-to-side, must fit within the space defined in the diagram.
  - **Never** place the front edge of the TV past the front edge of the TV support shelf (or stop molding – if equipped)
  - **Never** allow the sides of the TV to extend past the side edges of the TV support surface.
  - If the TV has a CRT picture tube, the picture tube cone may extend past the rear of the support shelf.
- Be sure to apply the warning label as instructed in the last assembly step. The label provides important safety related information.

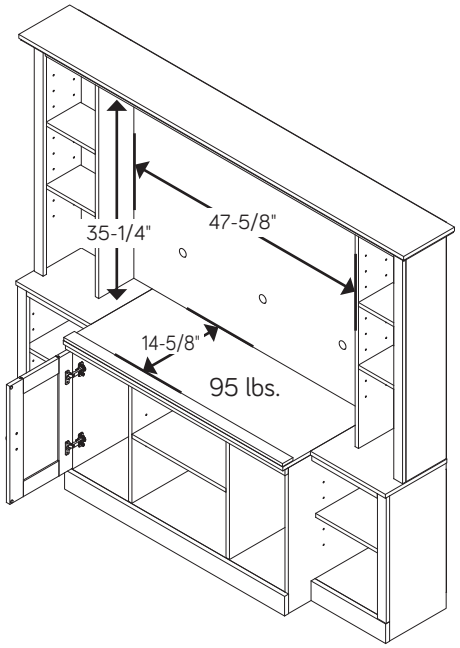

Part Identification

Now you know our ABCs.

While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

A	RIGHT END (1)
B	LEFT END (1)
C	RIGHT HUTCH END (1)
D	LEFT HUTCH END (1)
E	LARGE UPRIGHT (2)
F	RIGHT UPRIGHT (1)
G	LEFT UPRIGHT (1)
H	CENTER UPRIGHT (2)
I	TOP (1)
J	RIGHT TOP (1)
K	LEFT TOP (1)

L	SHELF (1)
M	BOTTOM (1)
N	SMALL BOTTOM (2)
O2	SMALL BACK (2)
P2	LARGE BACK (1)
Q	STOP MOLDING (1)
S	DOOR (2)
T	LARGE ADJUSTABLE SHELF (1)
U	LOWER ADJUSTABLE SHELF (2)
V	SMALL ADJUSTABLE SHELF (4)
W	FRONT SKIRT (1)

X	SIDE SKIRT (2)
Y	FRONT MOLDING (1)
Z	RIGHT MOLDING (1)
AA	LEFT MOLDING (1)
BB	UPPER MOLDING (1)
CC	LOWER MOLDING (1)
DD	SMALL LOWER MOLDING (2)
EE	LARGE END MOLDING (2)
FF	SMALL END MOLDING (2)

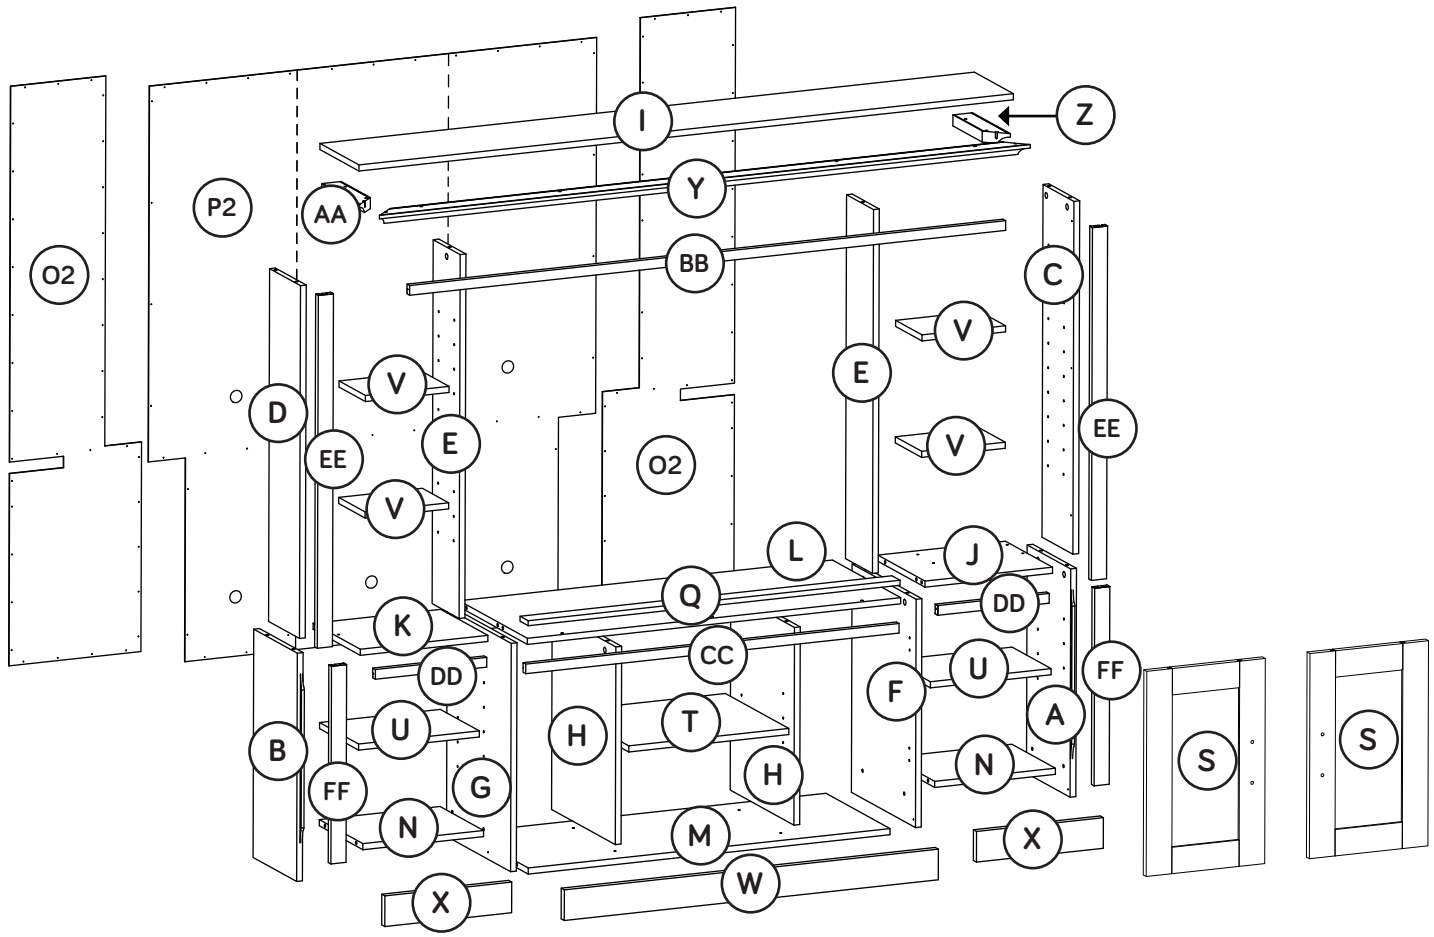

Hardware Identification

Screws are shown actual size. You may receive extra hardware with your unit.

GG2 HIDDEN CAM - 36

HH2 CAM DOWEL - 36

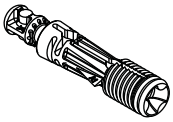

II ANGLE BRACKET - 28



JJ SAFETY BRACKET - 1

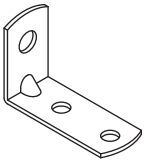

LL HINGE - 4

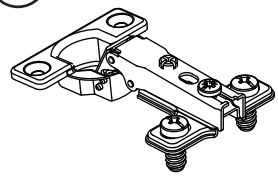

MM TIE PLATE - 5



NN MOLDING CONNECTOR - 2

OO PULL - 2

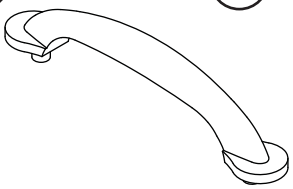

PP CAM COVER - 6



QQ TACK GLIDE - 8

RR FELT DISC CARD - 1

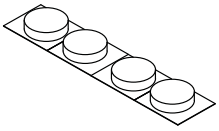

SS METAL PIN - 28



TT RUBBER SLEEVE - 28

UU WARNING LABEL - 1

WARNING
Never use this furniture with a TV that is too large or too heavy. Severe injury or death can occur. The TV and furniture will be unstable and may tip.
-The TV must less than 95 lbs.
-The base of the TV must be able to sit completely on this shelf.
-Refer to instruction book for complete safety information.
Note: This is a permanent label. Do not try to remove. Surface will be damaged.
02/ 02
269227

(Refer to step 23 for proper location and application)

VV BLACK 1-7/8" FLAT HEAD SCREW - 13



WW SILVER 1-1/4" PAN HEAD SCREW - 9



XX BROWN 1" FLAT HEAD SCREW - 3



YY SILVER 5/8" MACHINE SCREW - 4



ZZ BLACK 9/16" LARGE HEAD SCREW - 67



AAA BLACK 1/2" FLAT HEAD SCREW - 8

BBB NAIL - 126



Step 1

Look for this icon. It means a video assembly tip is available at **www.sauder.com/services/tips**

- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Push thirty-six HIDDEN CAMS (GG2) into the ENDS (A and B), HUTCH ENDS (C and D), UPRIGHTS (E, F, G, and H), TOPS (J and K), and the BOTTOMS (M and N). Then, insert a CAM DOWEL (HH2) into each HIDDEN CAM.

Scan this QR code or go to this address:
http://qr.sauder.com/?ID=1006
to watch a video on how to assemble your unit.

Do not tighten the HIDDEN CAMS in this step.

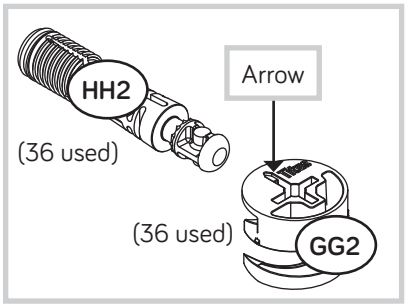

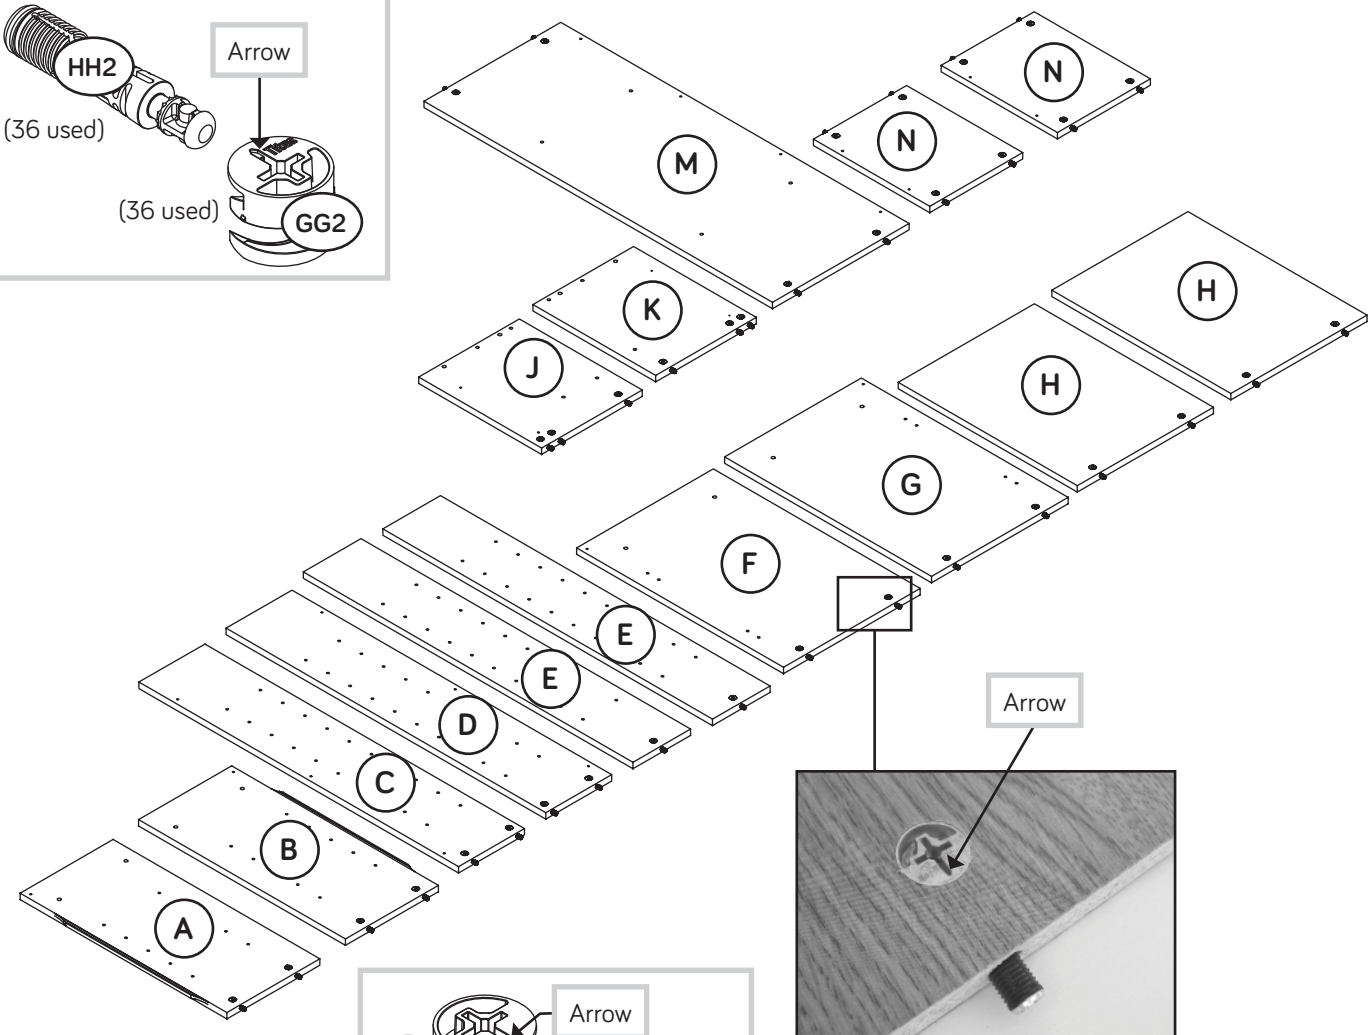

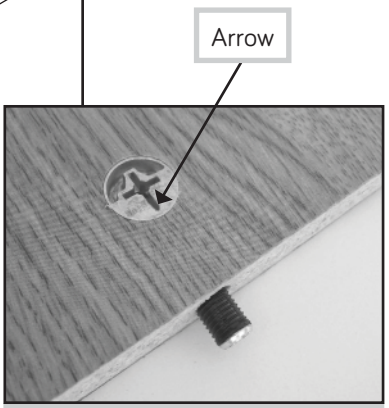

Insert the metal end of the CAM DOWEL into the HIDDEN CAM.

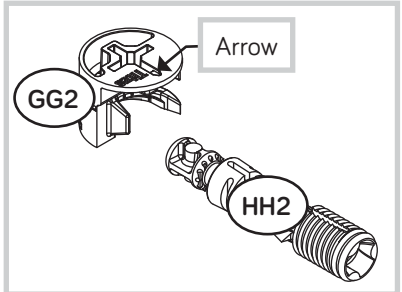

Step 2

Tap two MOLDING CONNECTORS (NN) into the notches in the MOLDINGS (Y, Z, and AA).

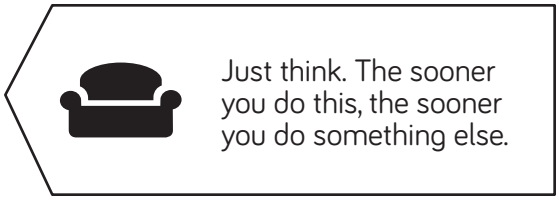

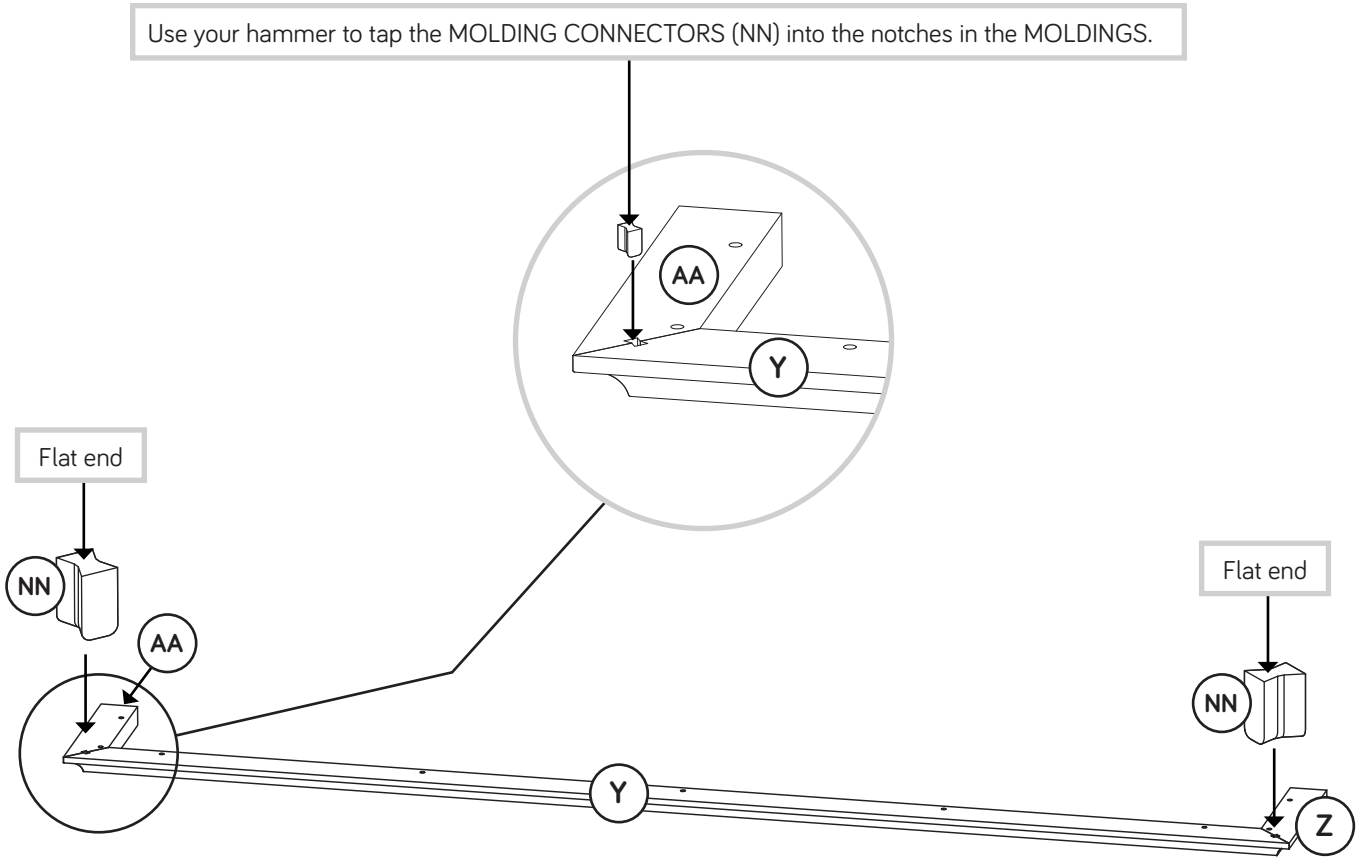

Step 3

- Fasten the MOLDINGS (Y, Z, and AA) to the TOP (I). Use nine SILVER 1-1/4" PAN HEAD SCREWS (WW).
- Fasten five TIE PLATES (MM) to the FRONT MOLDING (Y). Use five BLACK 9/16" LARGE HEAD SCREWS (ZZ).

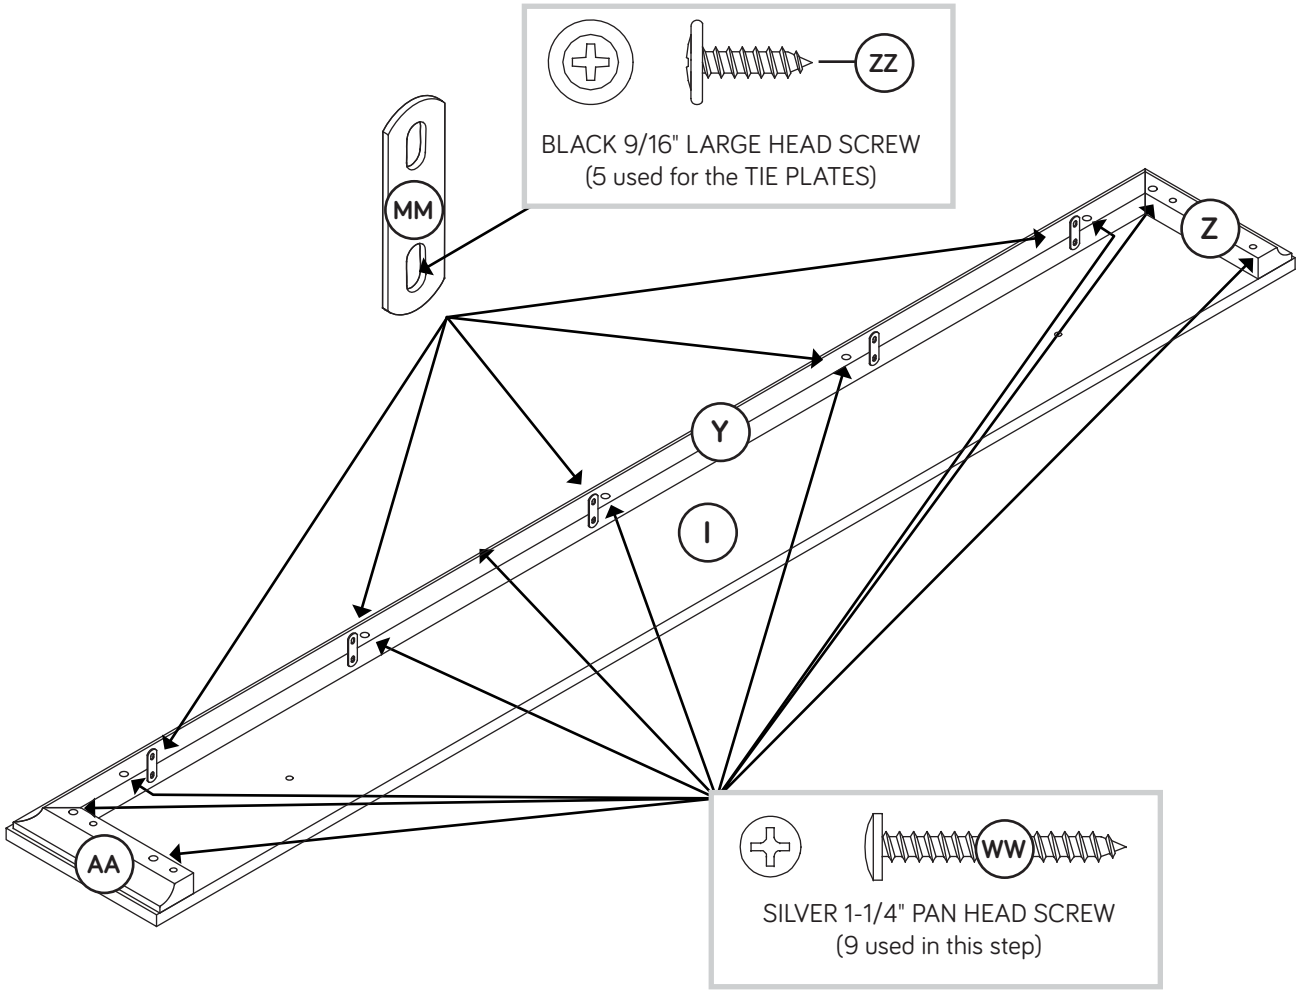

Step 4

- Fasten six ANGLE BRACKETS (II) to the HUTCH ENDS (C and D). Use six BLACK 9/16" LARGE HEAD SCREWS (ZZ).
- NOTE: Be sure the edges of the ANGLE BRACKETS are even with the edges of the ENDS.
- Fasten the LARGE END MOLDINGS (EE) to the HUTCH ENDS (C and D). Use six BLACK 9/16" LARGE HEADSCREWS (ZZ).
- NOTE: There are no pre-drilled holes in the LARGE END MOLDINGS. The SCREWS will tighten into the grooves.

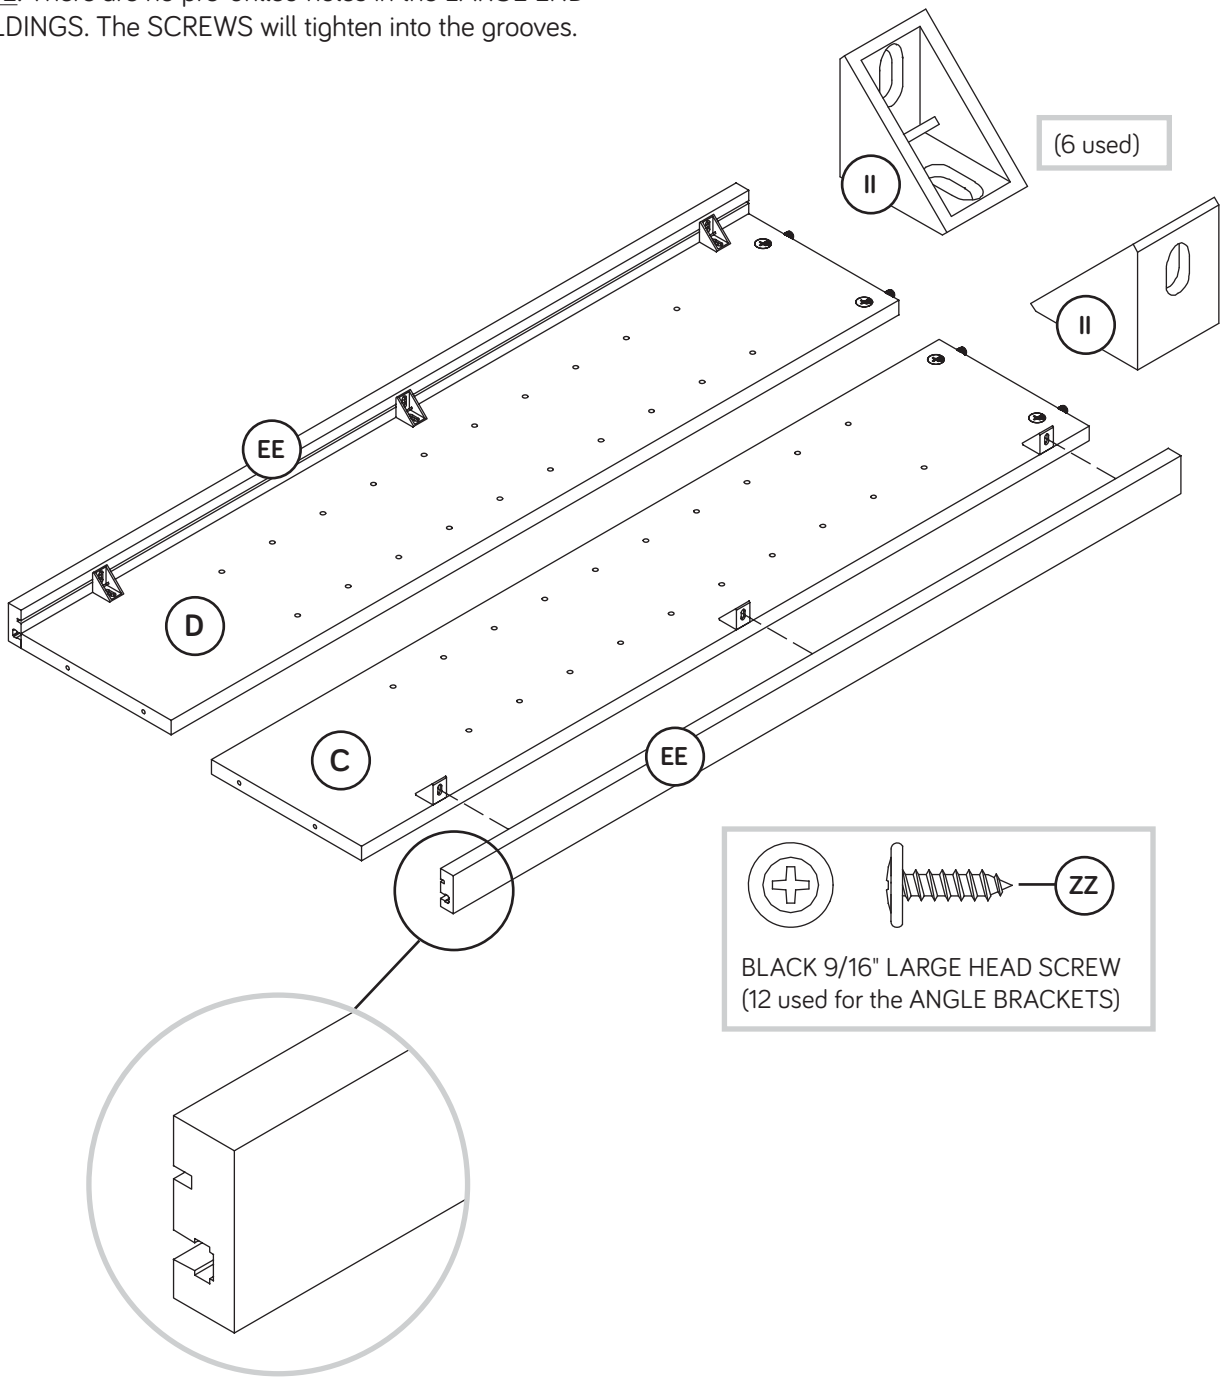

Step 5

Fasten the HUTCH ENDS (C and D) to the TOP (I). Tighten four HIDDEN CAMS.

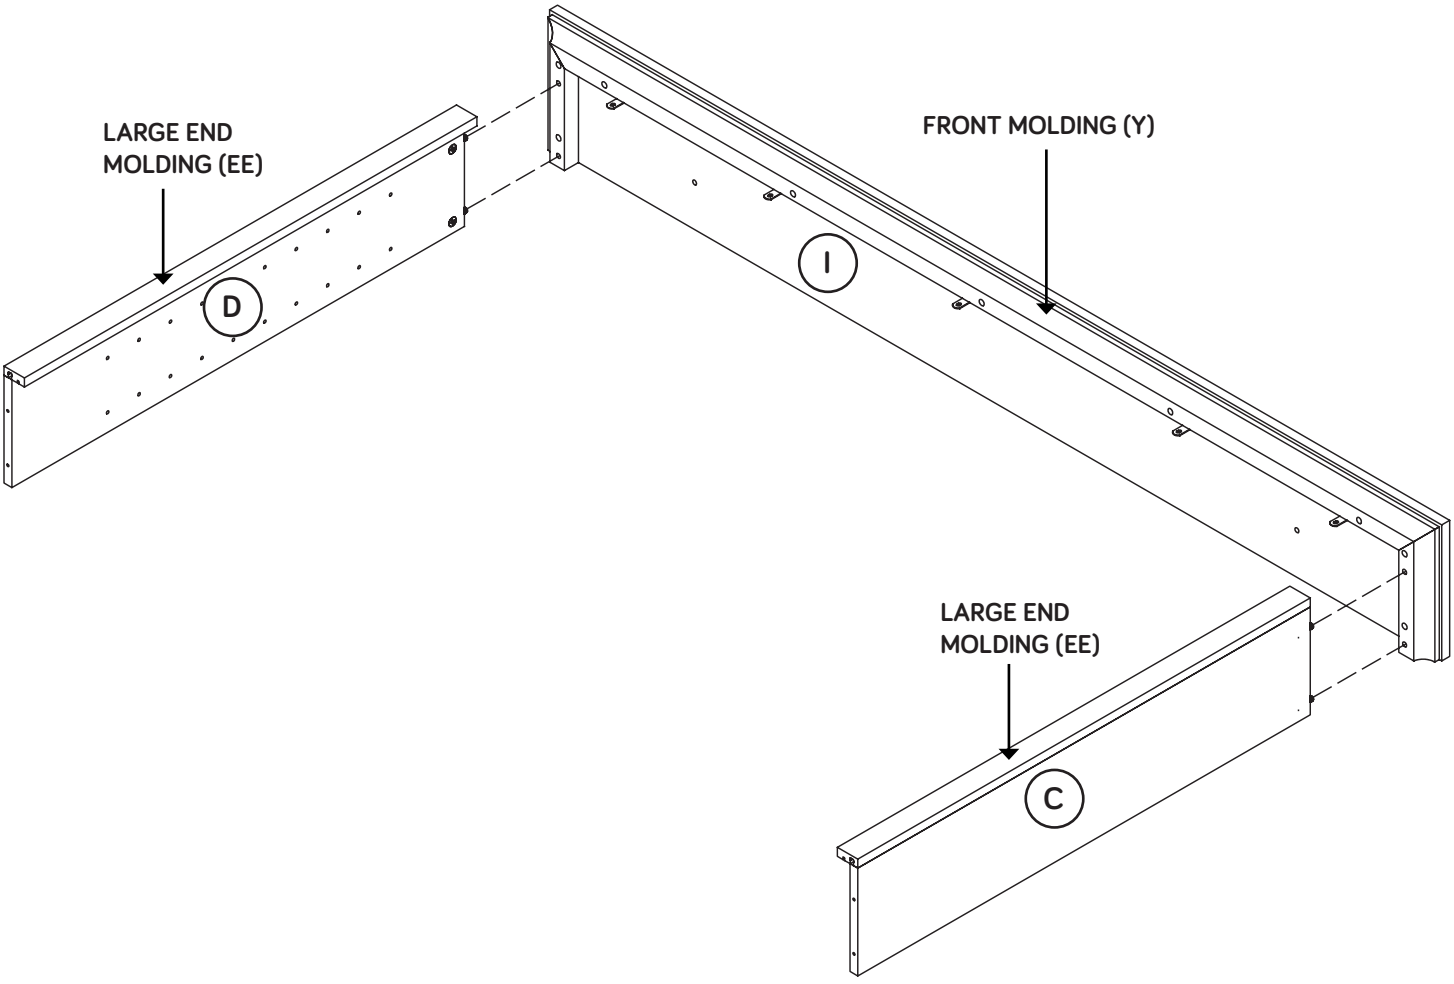

⚠ Caution

Risk of damage or injury. HIDDEN CAMS must be completely tightened. HIDDEN CAMS that are not completely tightened may loosen, and parts may separate. To completely tighten:

Start

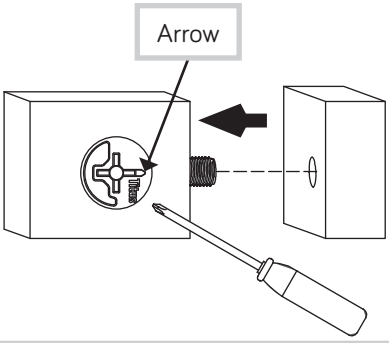

Tighten

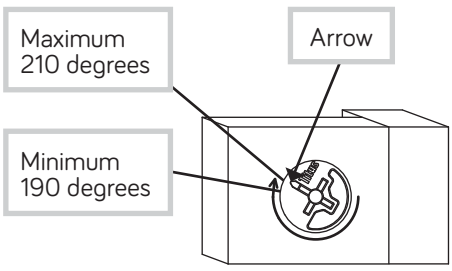

Step 6

Fasten the LARGE UPRIGHTS (E) to the TOP (I). Tighten two HIDDEN CAMS.

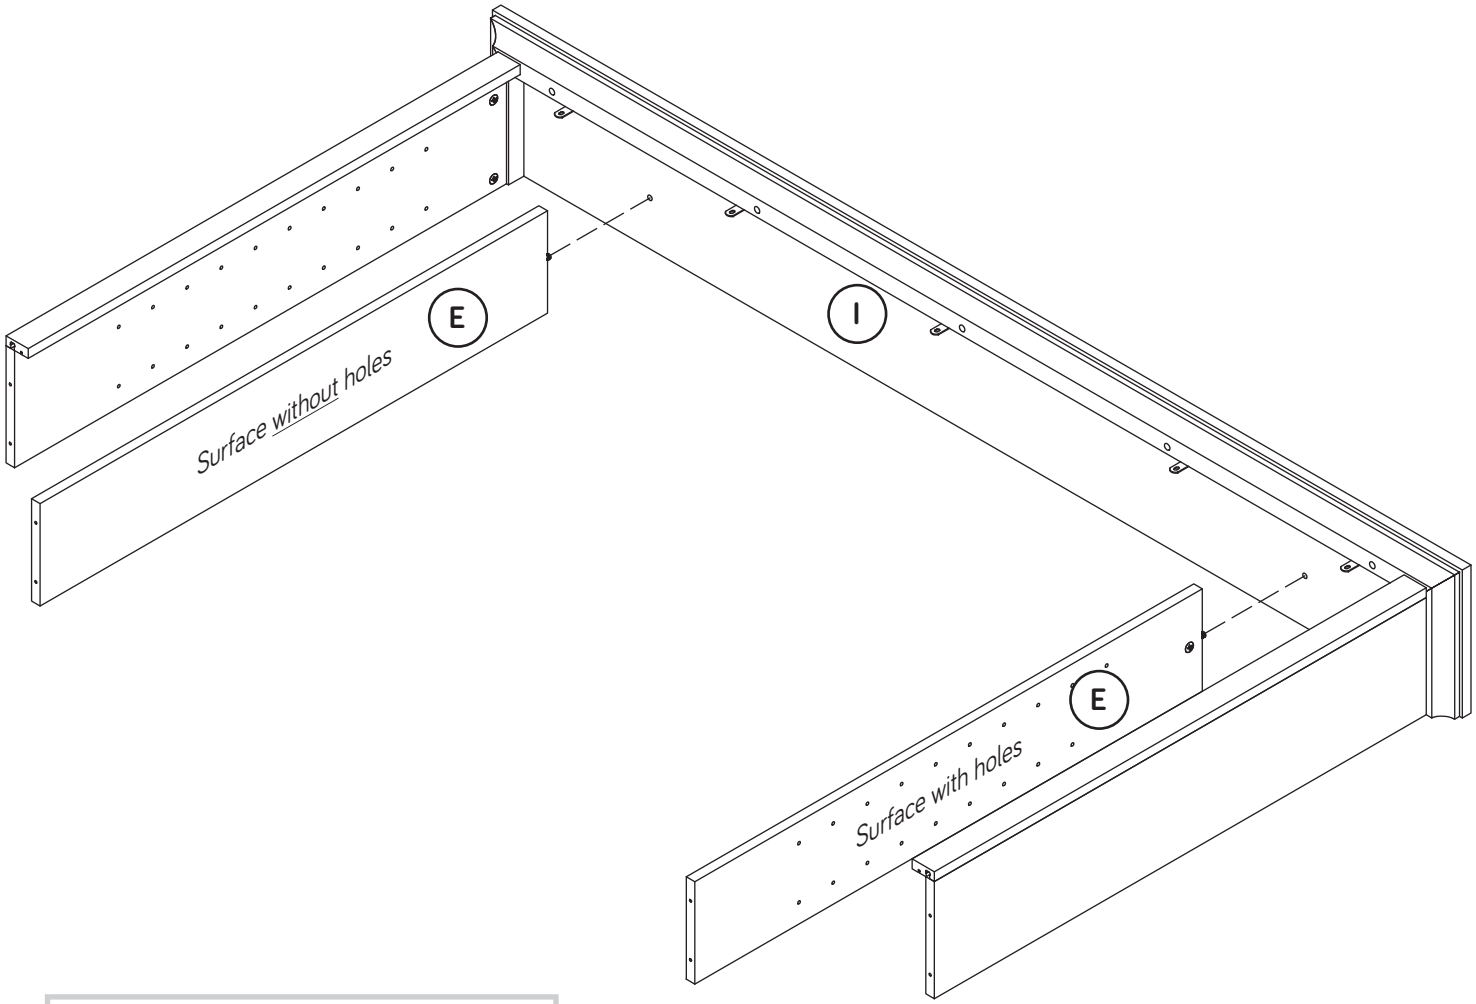

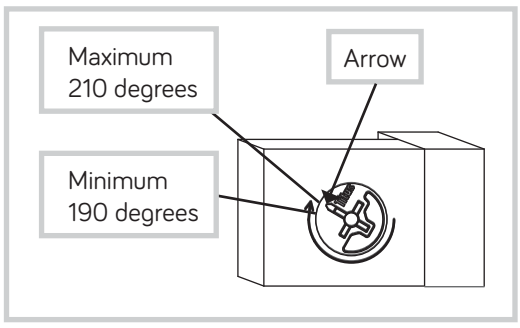

Step 7

- Fasten the UPPER MOLDING (BB) to the TOP (I). Use five BLACK 9/16" LARGE HEAD SCREWS (ZZ).
- NOTE: There are no pre-drilled holes in the UPPER MOLDING. The SCREWS will tighten into the groove.

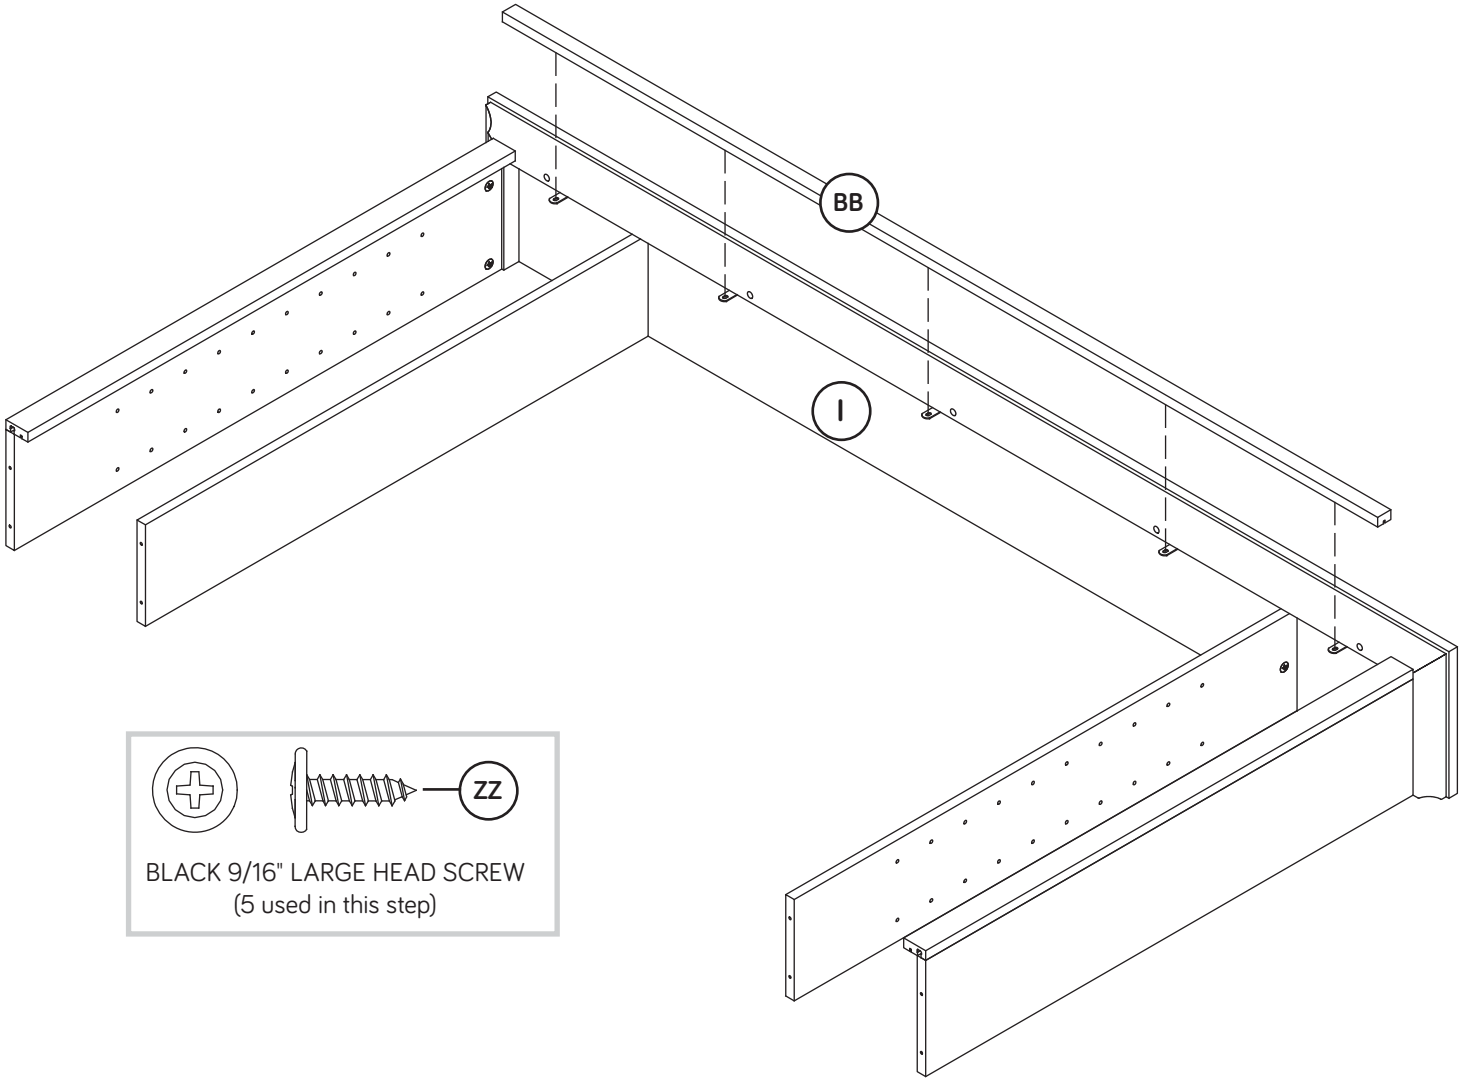

BLACK 9/16" LARGE HEAD SCREW
(5 used in this step)

Step 8

Fasten the TOPS (J and K) to the SHELF (L). Tighten six HIDDEN CAMS.

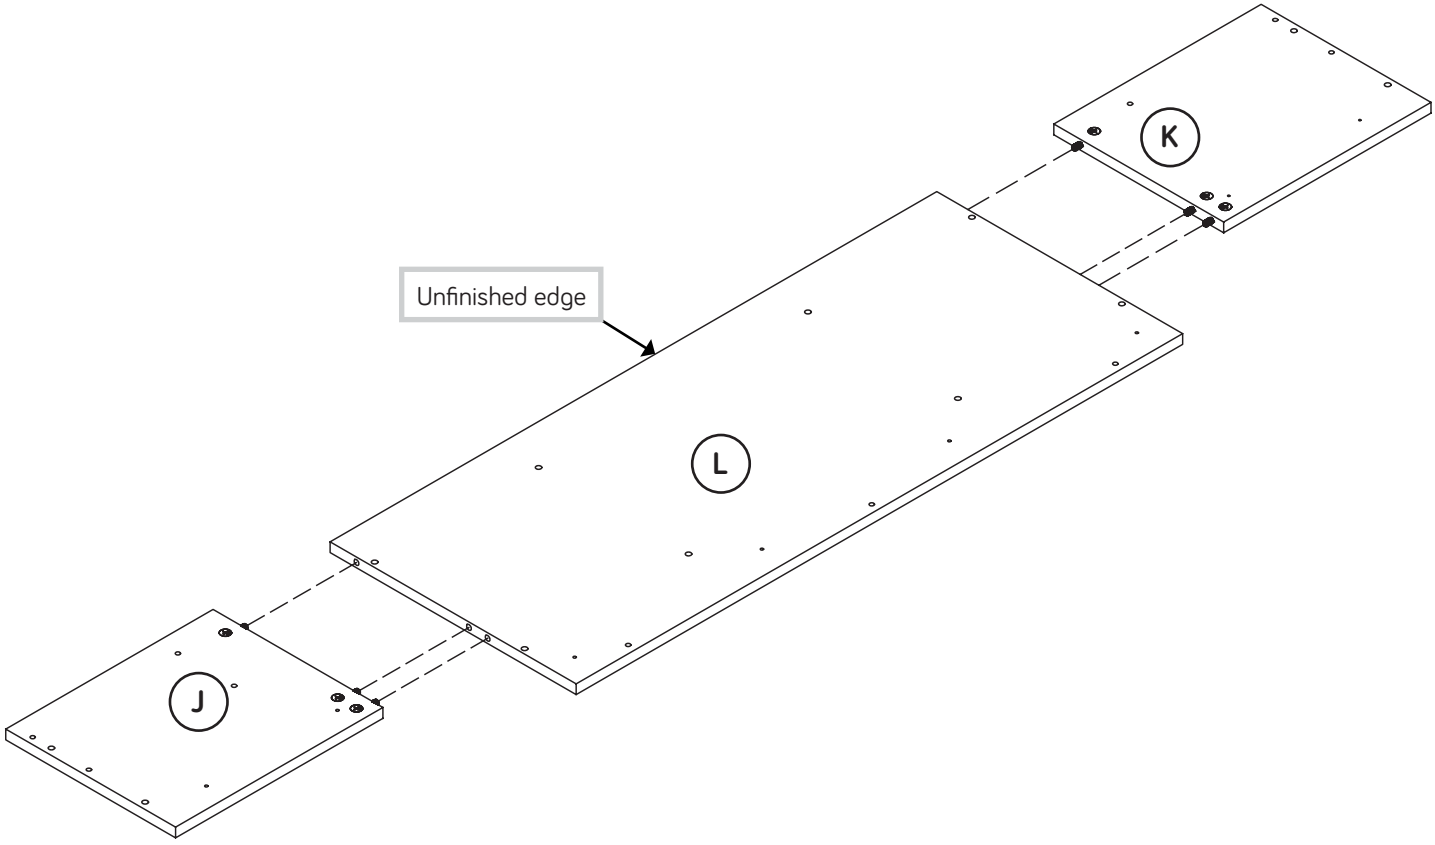

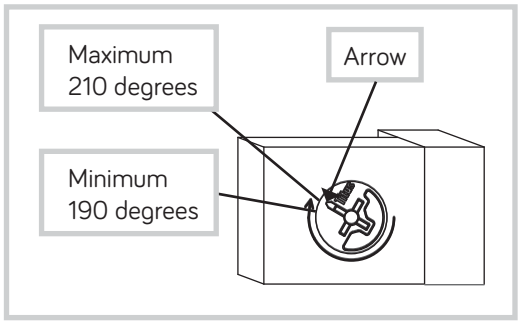

Step 9

- Fasten the TOPS (J and K) to the HUTCH ENDS (C and D) and LARGE UPRIGHTS (E). Use eight BLACK 1-7/8" FLAT HEAD SCREWS (VV).
- Fasten the STOP MOLDING (Q) to the SHELF (L). Use three BROWN 1" FLAT HEAD SCREWS (XX).

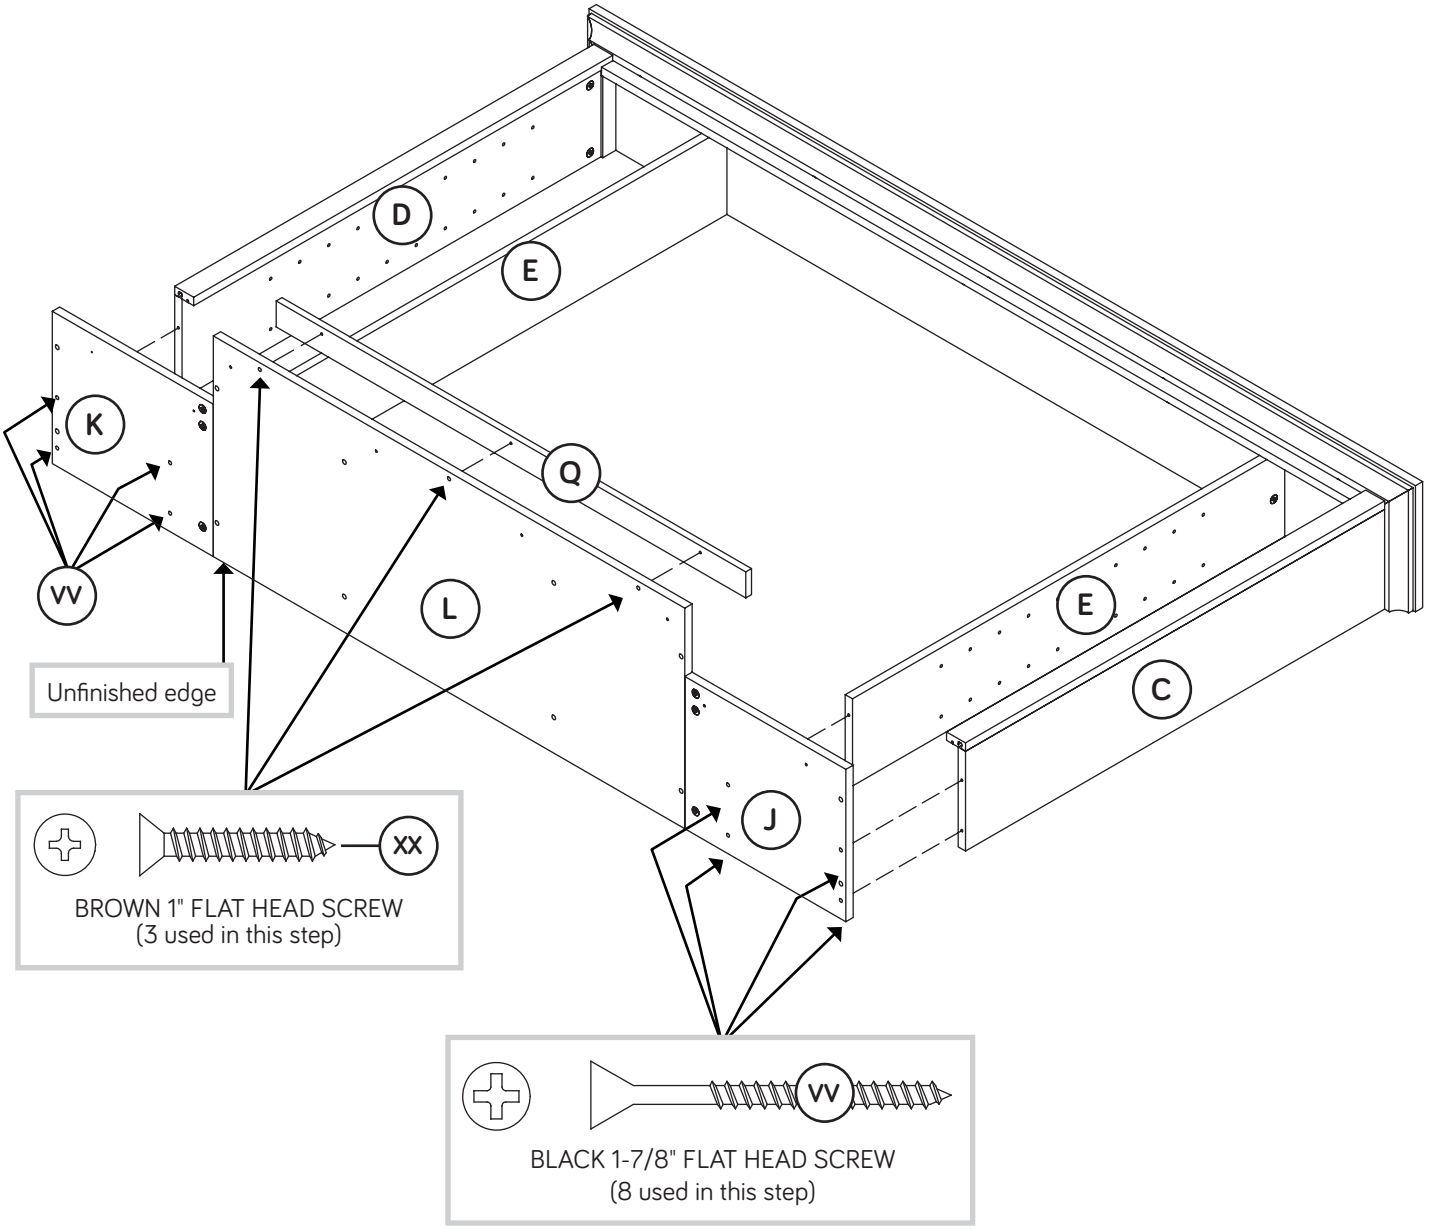

Step 10

Fasten the CENTER UPRIGHTS (H) to the SHELF (L).
Tighten four HIDDEN CAMS.

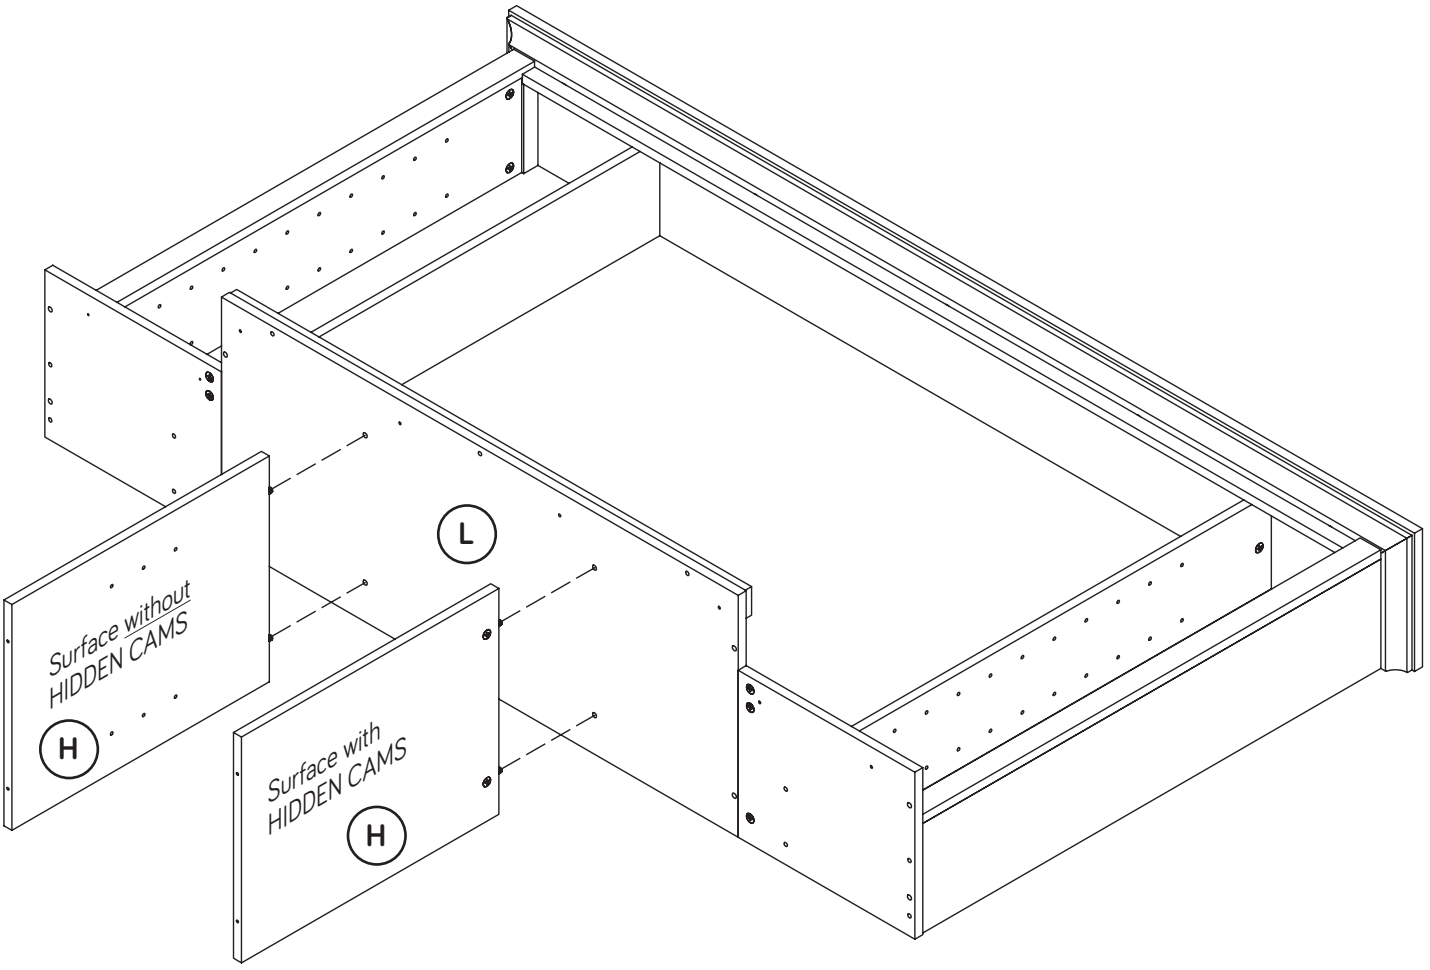

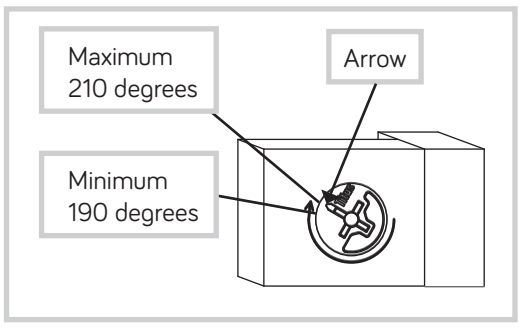

Step 11

Fasten the BOTTOM (M) to the CENTER UPRIGHTS (H).
Use four BLACK 1-7/8" FLAT HEAD SCREWS (VV).

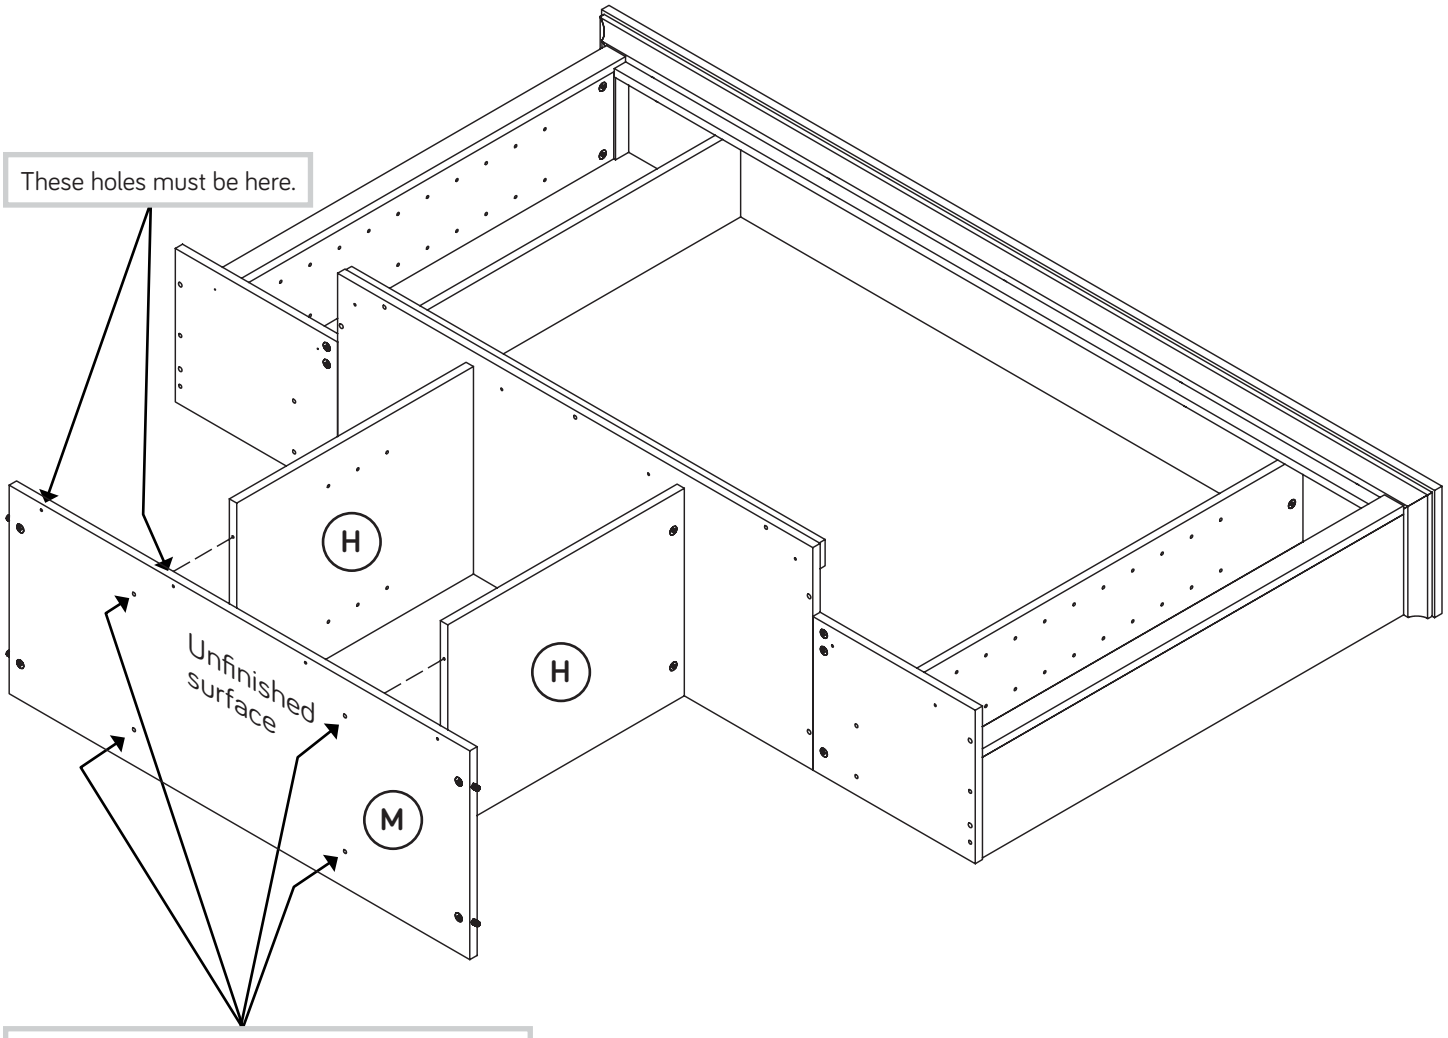



BLACK 1-7/8" FLAT HEAD SCREW
(4 used in this step)

Step 12

Fasten the UPRIGHTS (F and G) to the SHELF (L) and BOTTOM (M). Tighten eight HIDDEN CAMS.

Side Step: Make nachos. (Optional, but recommended.)

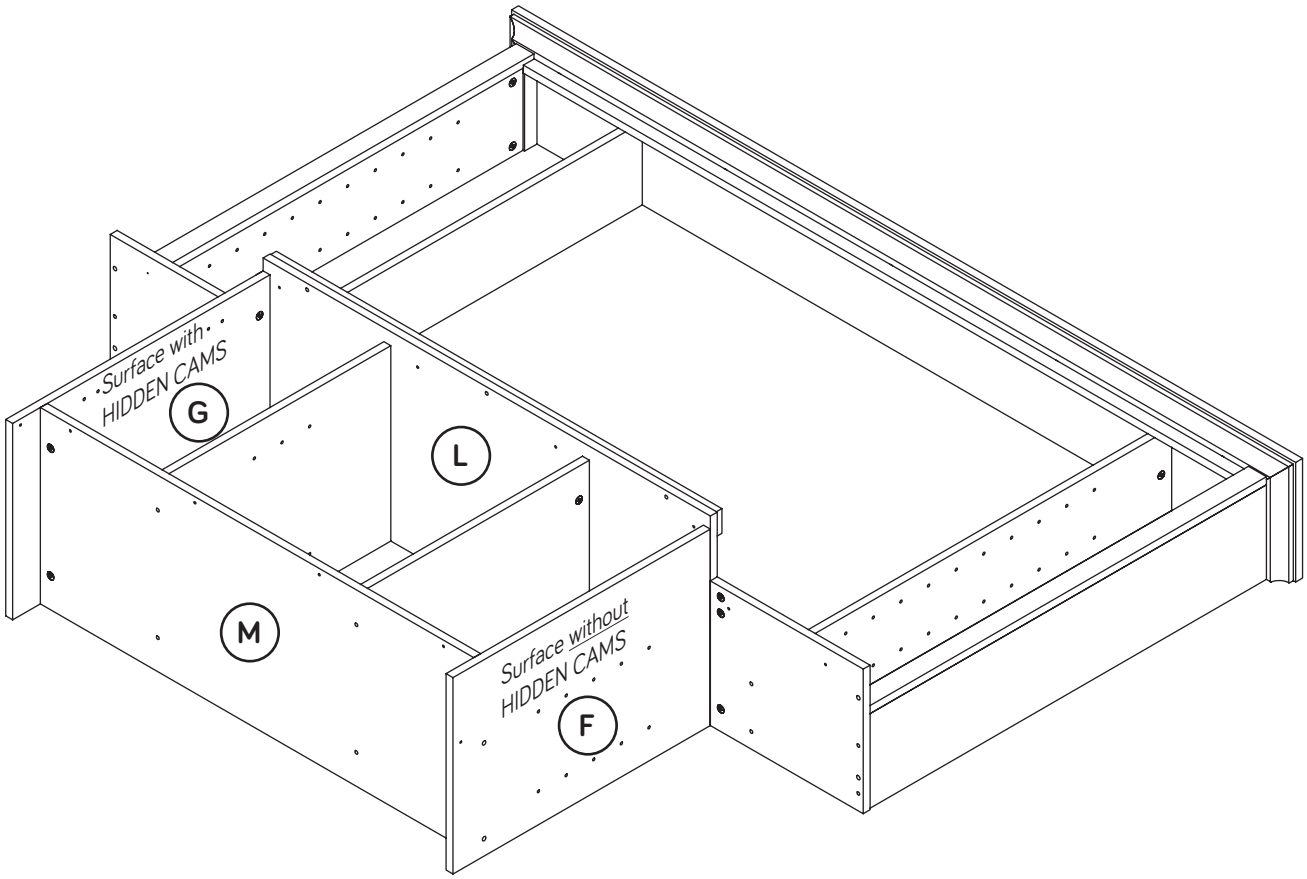

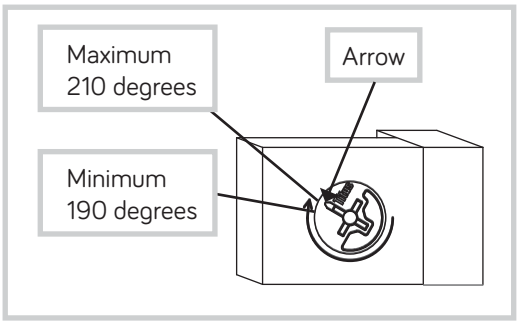

Step 13

Fasten the SMALL BOTTOMS (N) to the UPRIGHTS (F and G).
Tighten four HIDDEN CAMS.

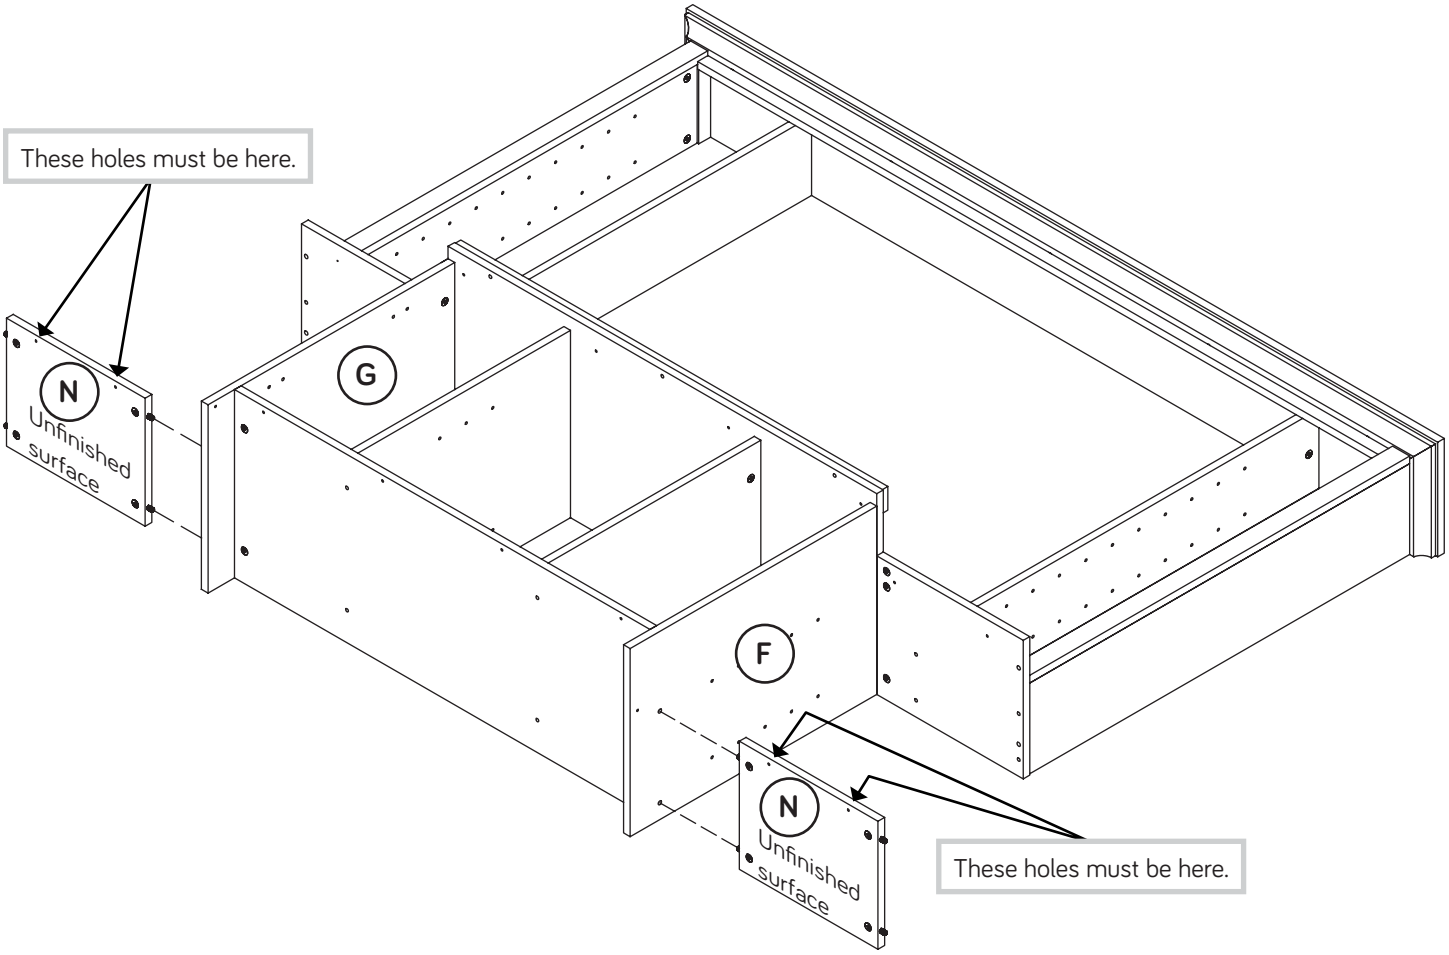

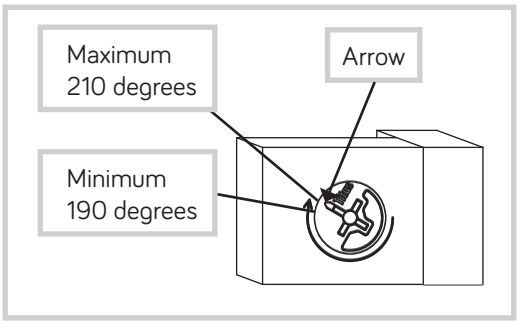

Step 14

- Fasten the ENDS (A and B) to the TOPS (J and K) and SMALL BOTTOMS (N). Tighten eight HIDDEN CAMS.
- Slide the SMALL END MOLDINGS (FF) onto the ENDS (A and B).
- * U.S. Patent No. 5,499,886

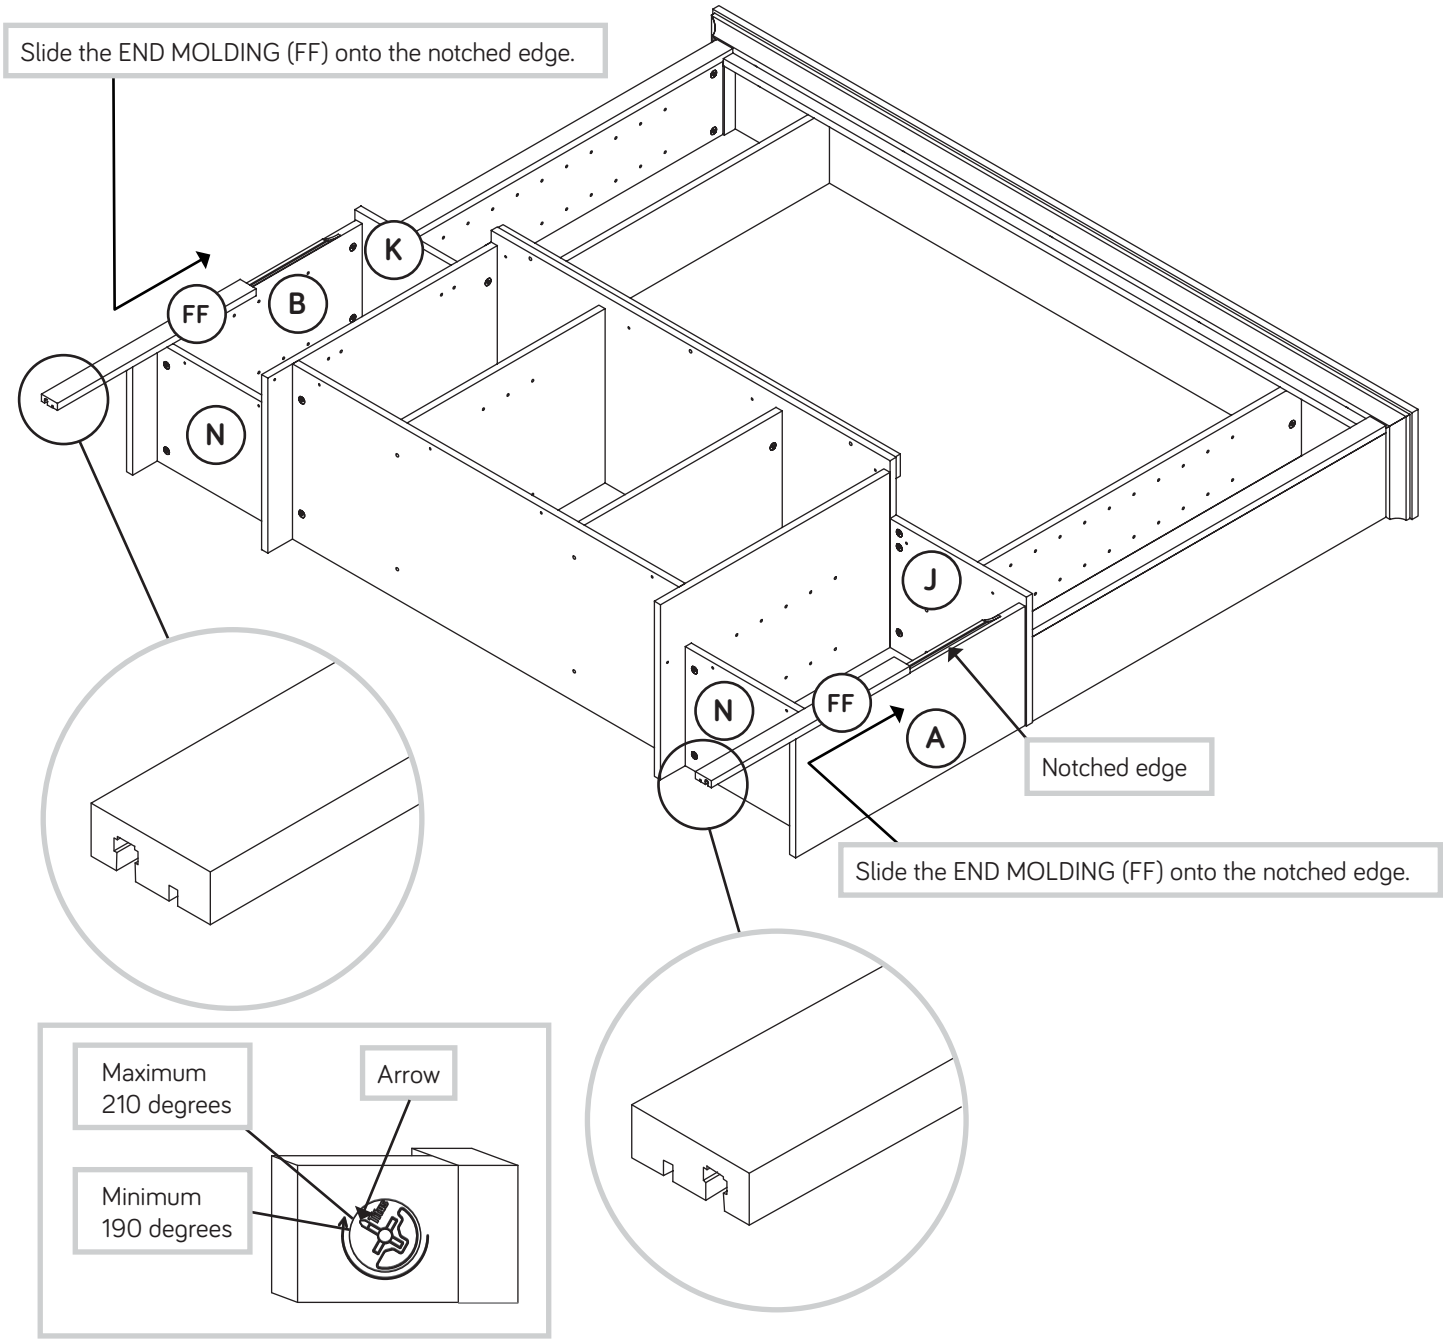

Step 15

- Fasten twenty ANGLE BRACKETS (II) to the ENDS (A and B), UPRIGHTS (F and G), TOPS (J and K), SHELF (L), and BOTTOMS (M and N). Use twenty BLACK 9/16" LARGE HEAD SCREWS (ZZ).
- NOTE: Be sure the edges of the ANGLE BRACKETS are even with the edges of the ENDS, UPRIGHTS, and BOTTOMS.

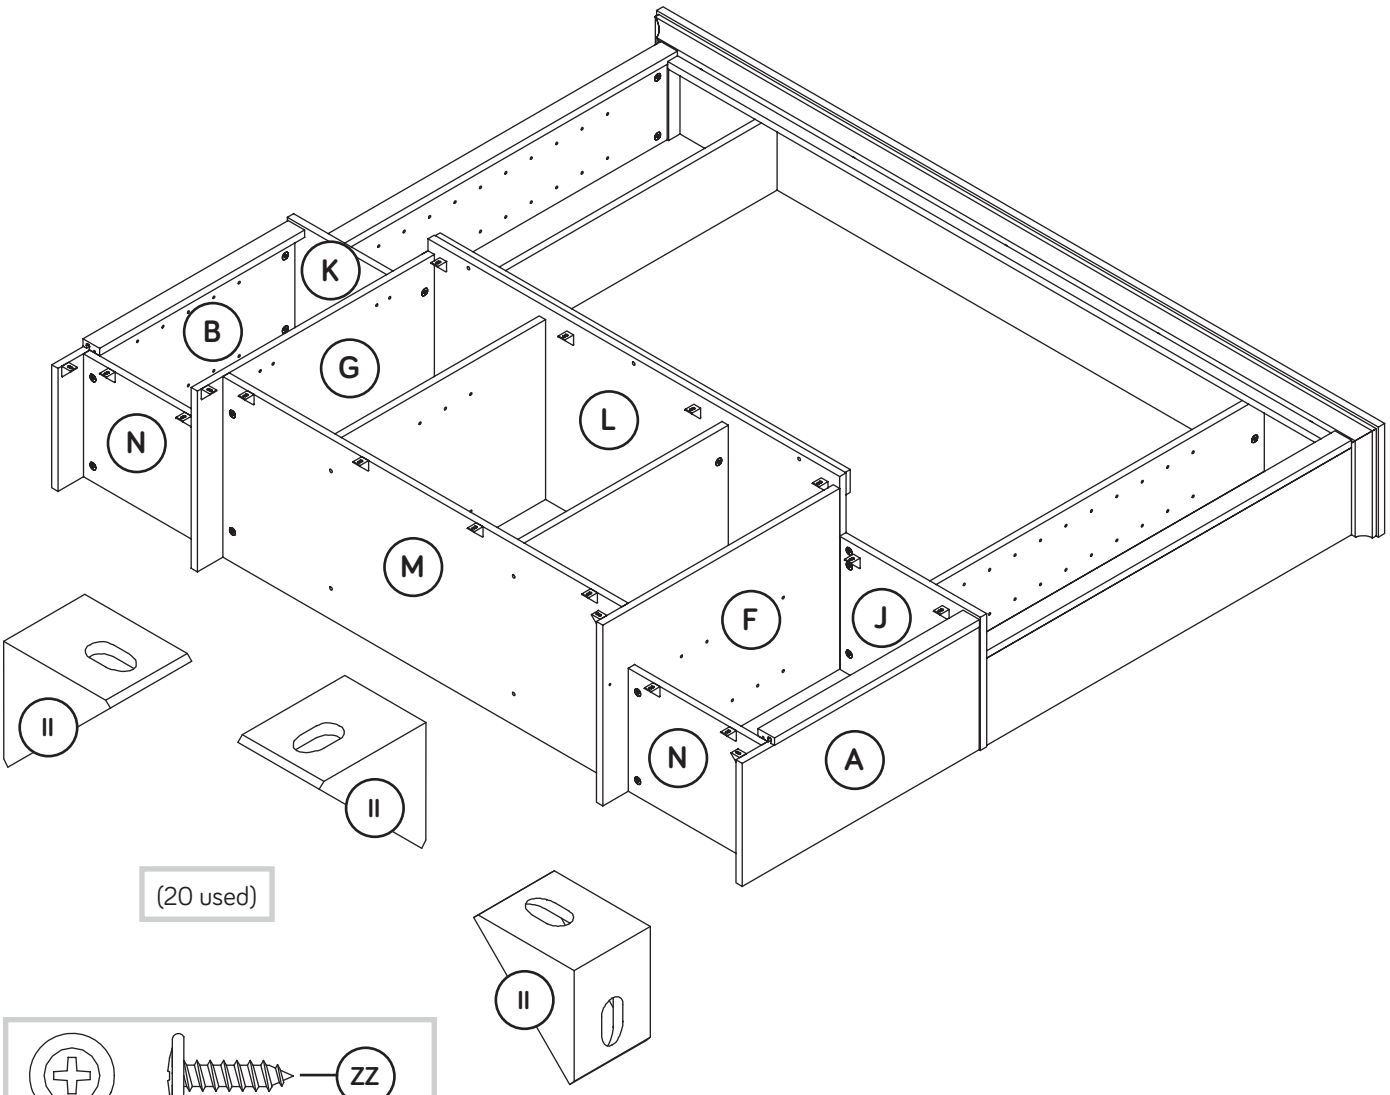



BLACK 9/16" LARGE HEAD SCREW
(20 used in this step)

Step 16

- Fasten the LOWER MOLDING (CC) to the SHELF (L). Use four BLACK 9/16" LARGE HEAD SCREWS (ZZ).
- Fasten the SMALL LOWER MOLDINGS (DD) to the TOPS (J and K). Use four BLACK 9/16" LARGE HEAD SCREWS (ZZ).
- NOTE: There are no pre-drilled holes in the SMALL LOWER MOLDINGS (DD). The SCREWS will tighten into the grooves.

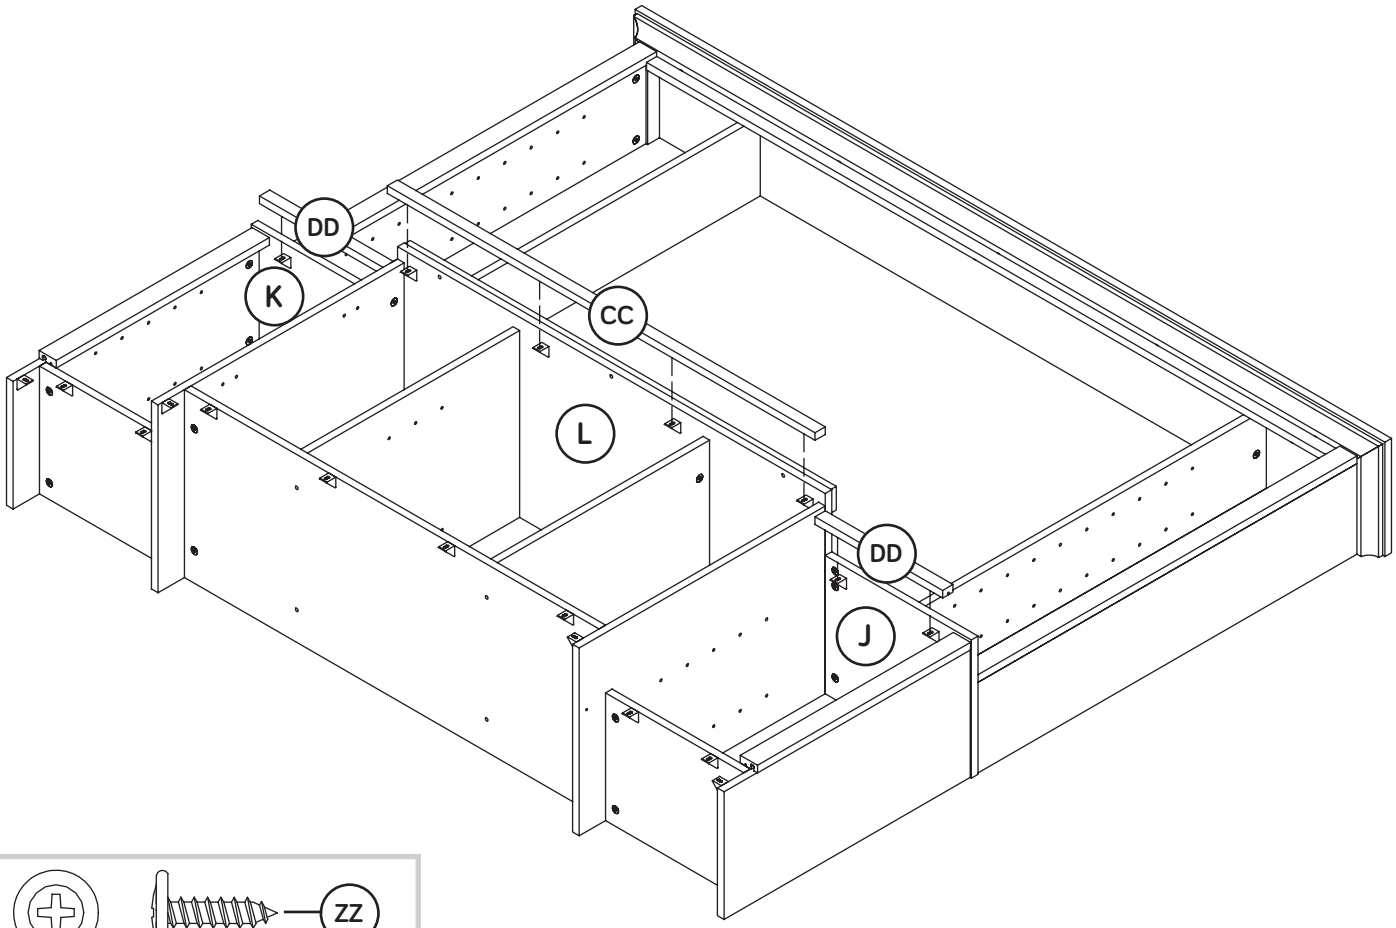



BLACK 9/16" LARGE HEAD SCREW
(8 used in this step)

Step 17

Fasten the FRONT SKIRT (W) to the UPRIGHTS (F and G) and BOTTOM (M). Use six BLACK 9/16" LARGE HEAD SCREWS (ZZ).

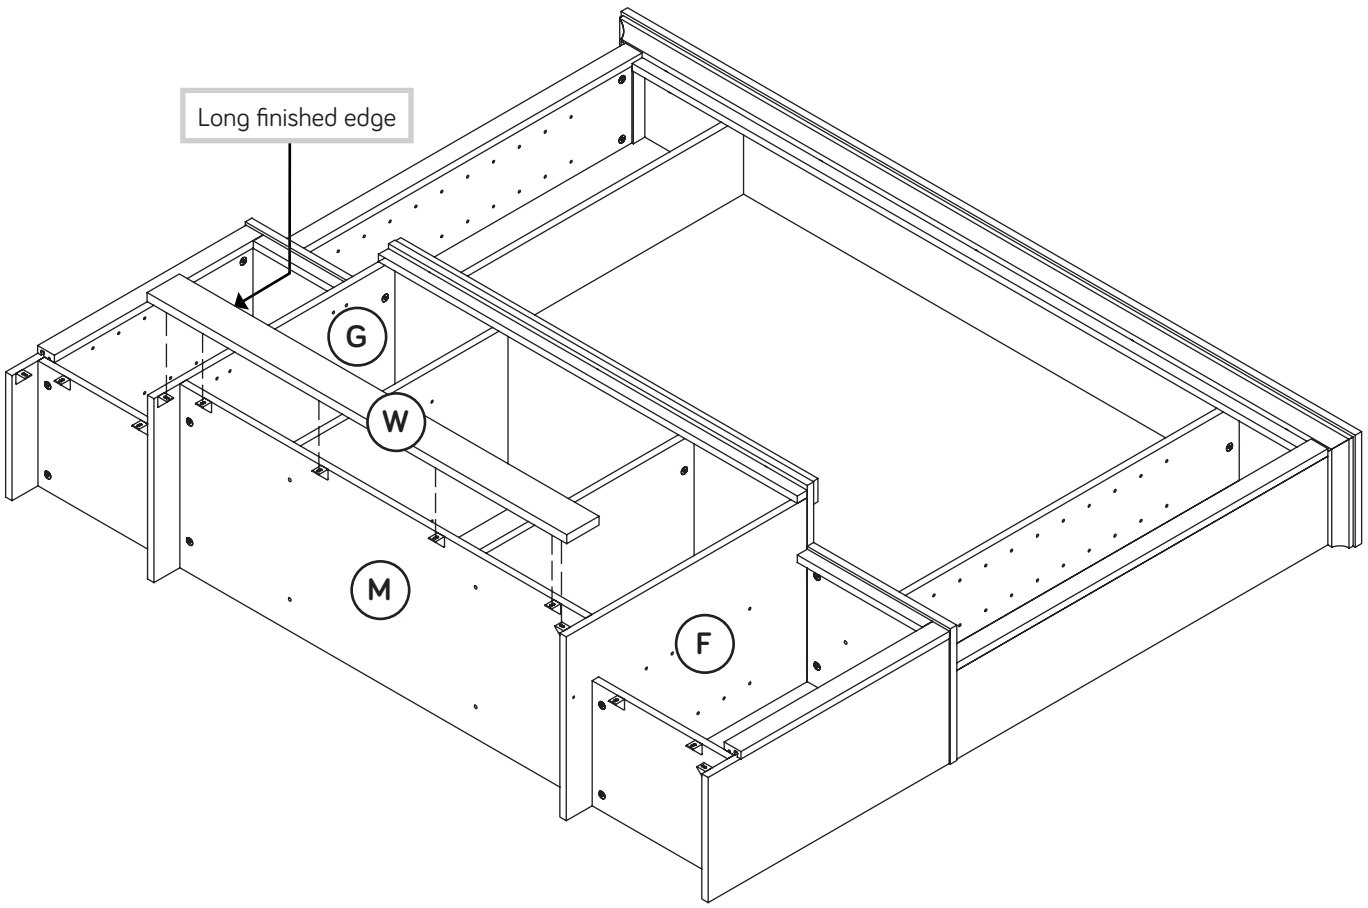



BLACK 9/16" LARGE HEAD SCREW
(6 used in this step)

Step 18

- Fasten two ANGLE BRACKETS (II) to the SIDE SKIRTS (X). Use two BLACK 9/16" LARGE HEAD SCREWS (ZZ).
- NOTE: Pay close attention to the position of the ANGLE BRACKETS on the SKIRTS. Be sure the edges of the ANGLE BRACKETS are even with the edges of the SKIRTS.
- Fasten the SIDE SKIRTS (X) to the ENDS (A and B), UPRIGHTS (F and G) and SMALL BOTTOMS (N). Use eight BLACK 9/16" LARGE HEAD SCREWS (ZZ).

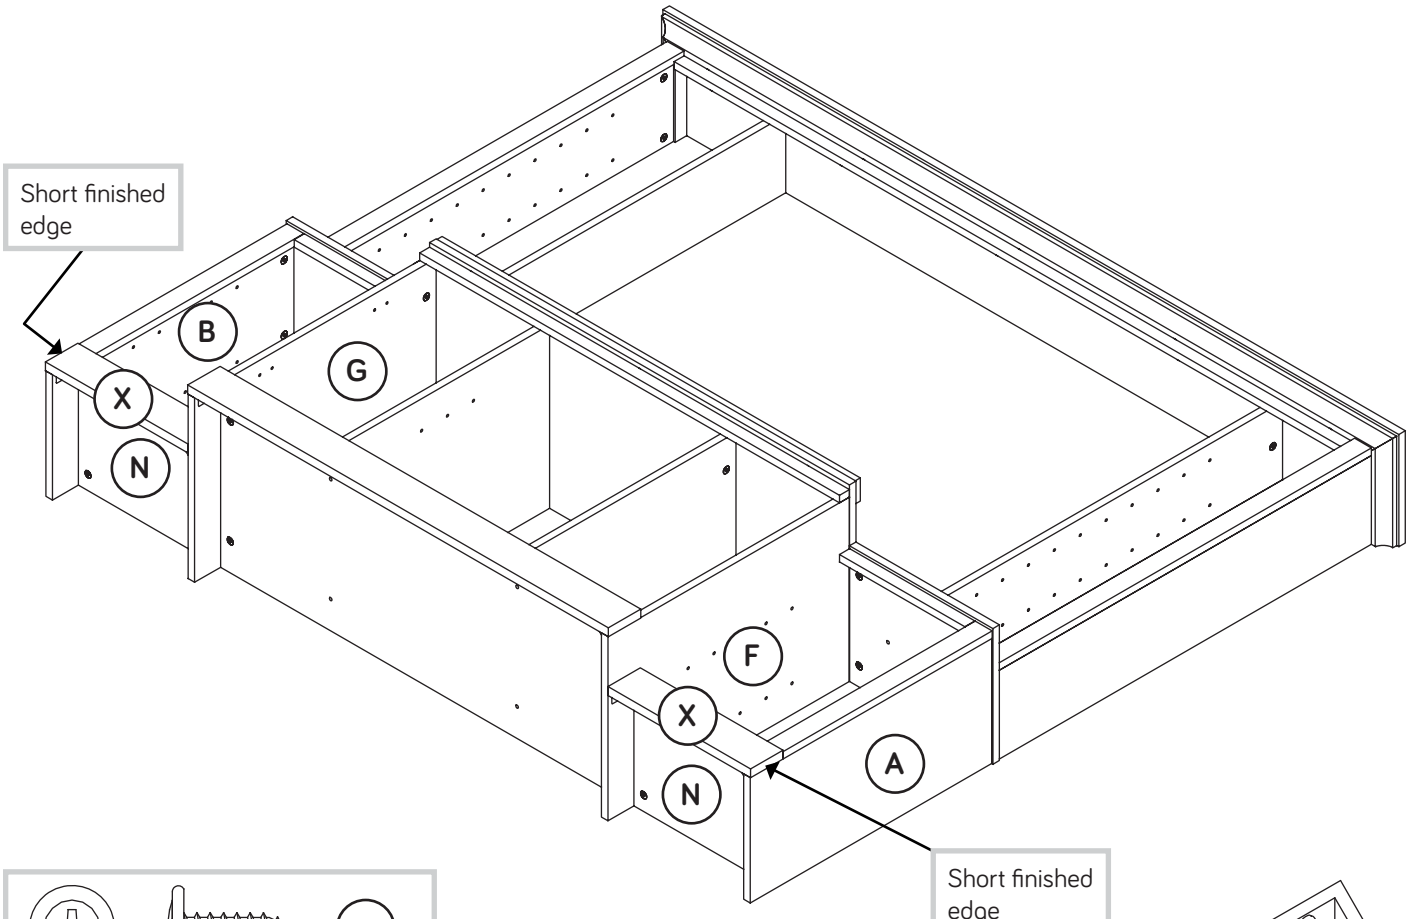



BLACK 9/16" LARGE HEAD SCREW
(10 used in this step)

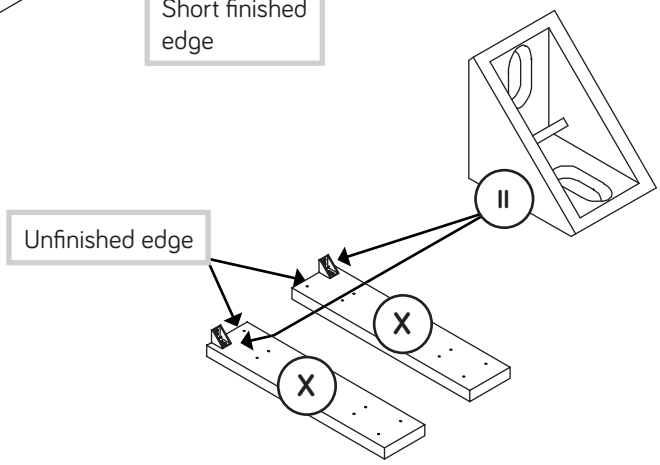

Step 19

- With someone's help, carefully turn your unit over onto its front edges. Unfold the BACK (P2) and lay it over the center of your unit.
- Make equal margins along all four edges of the BACKS (P2). Push on opposite corners of your unit if needed to make it "square".
- Fasten the BACK (P2) to your unit using fifty-three NAILS (BBB).
- Lay the BACKS (O2) over the outside of your unit.
- Make equal margins along three edges of the BACKS (O2). Push on opposite corners of your unit if needed to make it "square". The BACKS (O2) will overlap the center BACK (P2).
- Fasten the BACKS (O2) to your unit using the remaining NAILS (BBB).
- NOTE: Be sure to tap NAILS into the holes that line up over the UPRIGHTS (E, F, G, and H), TOPS (J and K), and SHELF (L).
- NOTE: Perforations have been provided for access through the LARGE BACK. Carefully cut out the holes needed.
- Tap eight TACK GLIDES (QQ) into the ENDS (A and B) and UPRIGHTS (F and G).

Caution

Do not stand the unit upright without the BACK fastened. The unit may collapse.

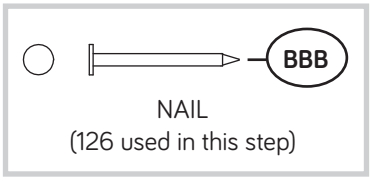

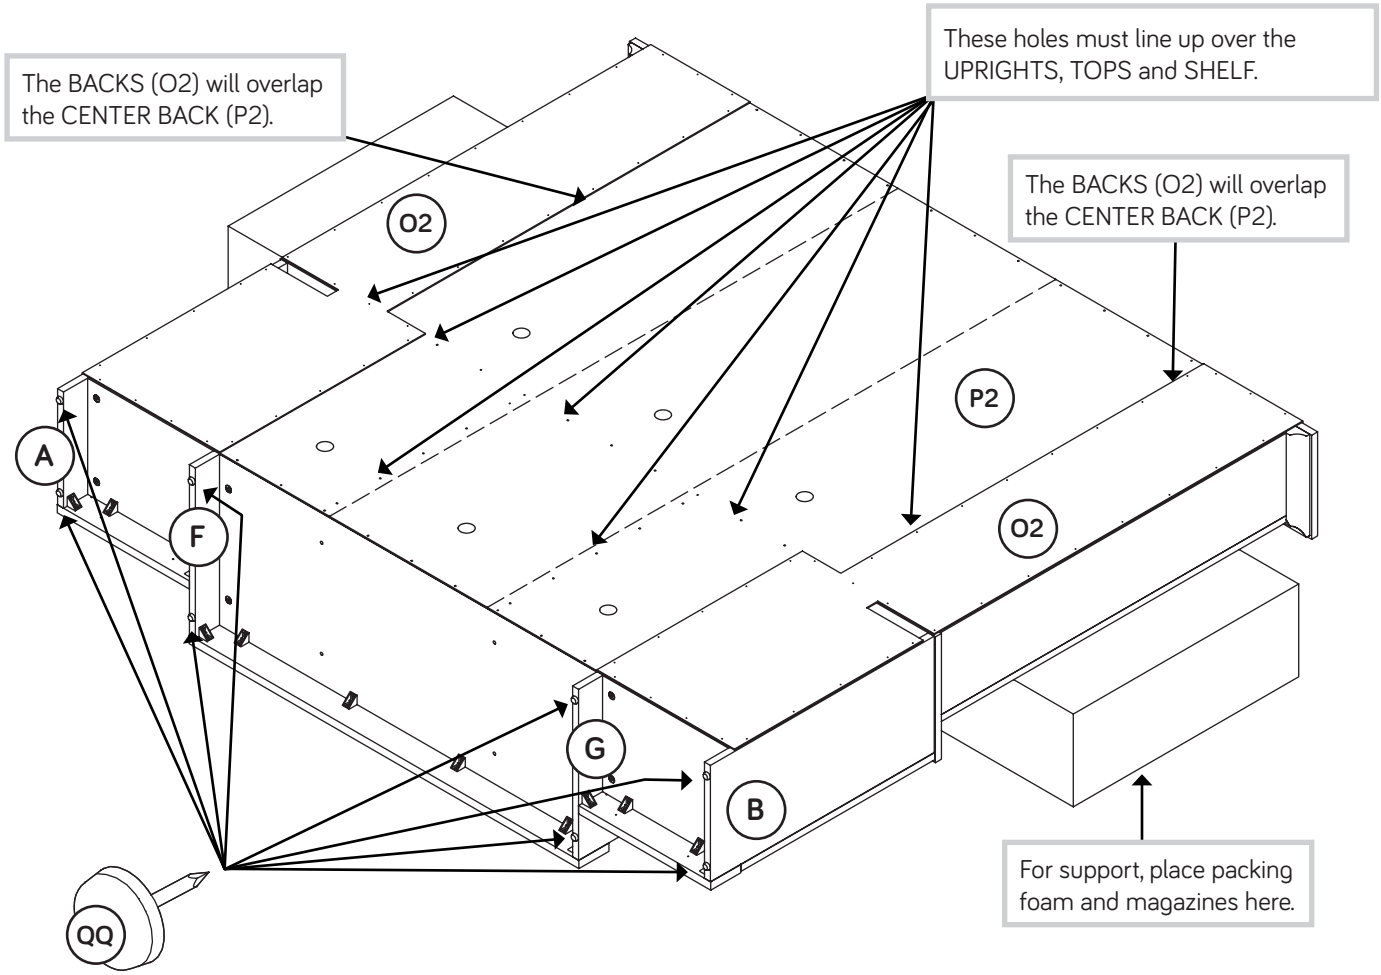

Step 20

Fasten two HINGES (LL) to each DOOR (S). Use eight BLACK 1/2" FLAT HEAD SCREWS (AAA).

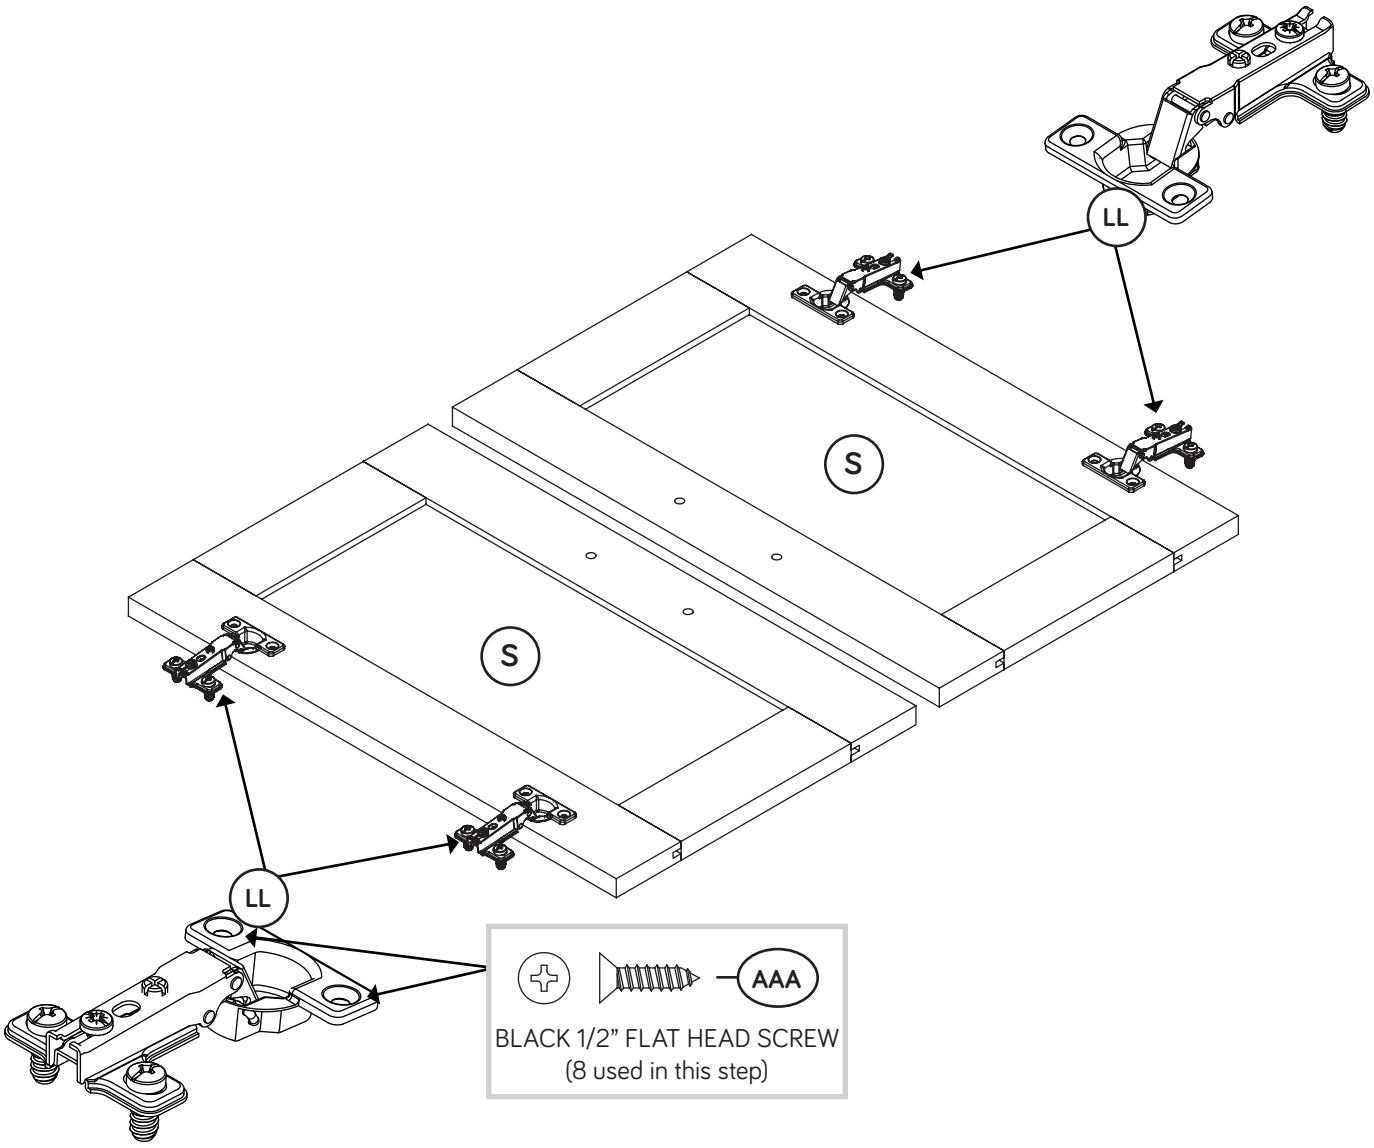

Step 21

- With someone's help, carefully stand your unit upright.
- Before fastening the DOOR to your unit, be sure the mounting screw is against the stops as shown in the right diagram. If it isn't, loosen the mounting screw to slide it against the stops. Then tighten the mounting screw.
- Fasten the DOOR (S) to the LEFT UPRIGHT (G). Use the screws in the HINGES. See the next step for adjustments.
- Peel the FELT DISCS from the FELT DISC CARD (RR). Stick a FELT DISC on the DOOR where it comes in contact with the CENTER UPRIGHT (H).
- Fasten a PULL (OO) to the DOOR (S). Use two SILVER 5/8" MACHINE SCREWS (YY).
- Repeat this step for the other DOOR (S).

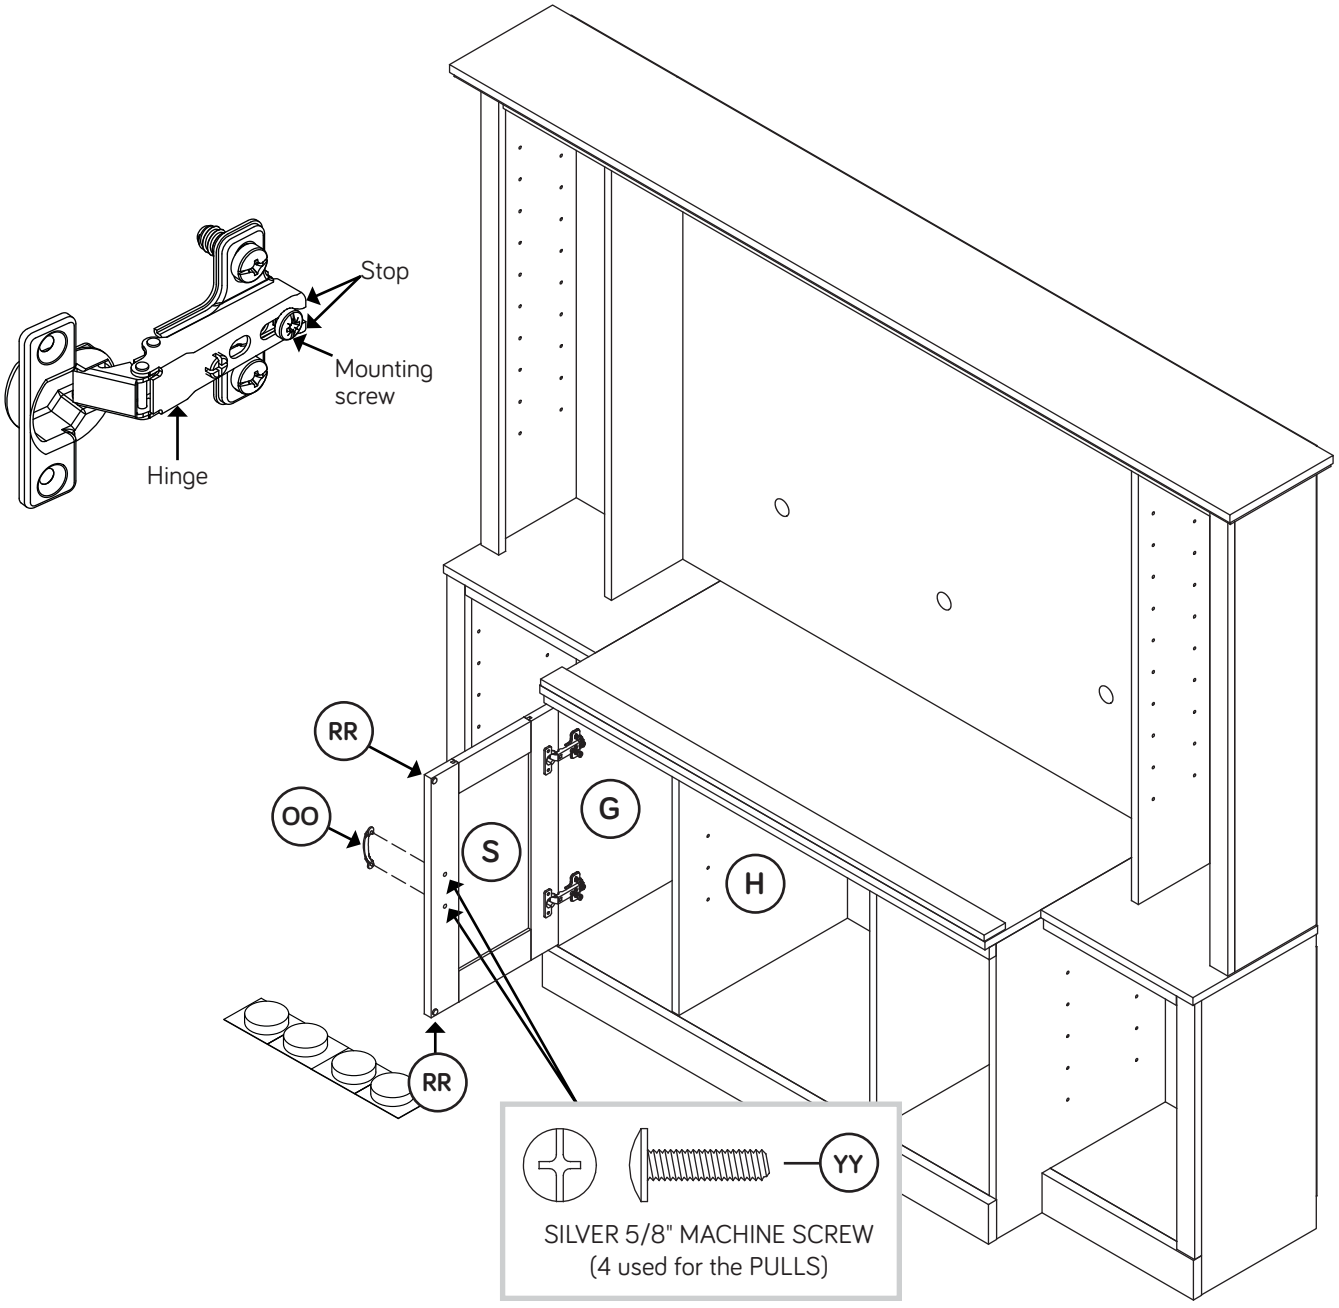

Step 22

- Refer to the enlarged diagram to identify the parts on the HINGES.
- The DOORS may need some adjustments. Follow the text below to make needed adjustments.
- DOOR ADJUSTMENTS:
  To adjust the DOORS from side to side (horizontal), loosen the mounting screw several turns, then turn the adjusting screw in or out. Tighten the mounting screw after making adjustments.
- To adjust the DOORS up and down (vertical), loosen both vertical adjustment screws. Move the DOORS up or down to the desired location. Tighten the screws after making adjustments.
- To adjust the DOORS in or out (depth), loosen the mounting screw one turn and move the DOORS in or out, as needed. Tighten the mounting screw after making adjustments.

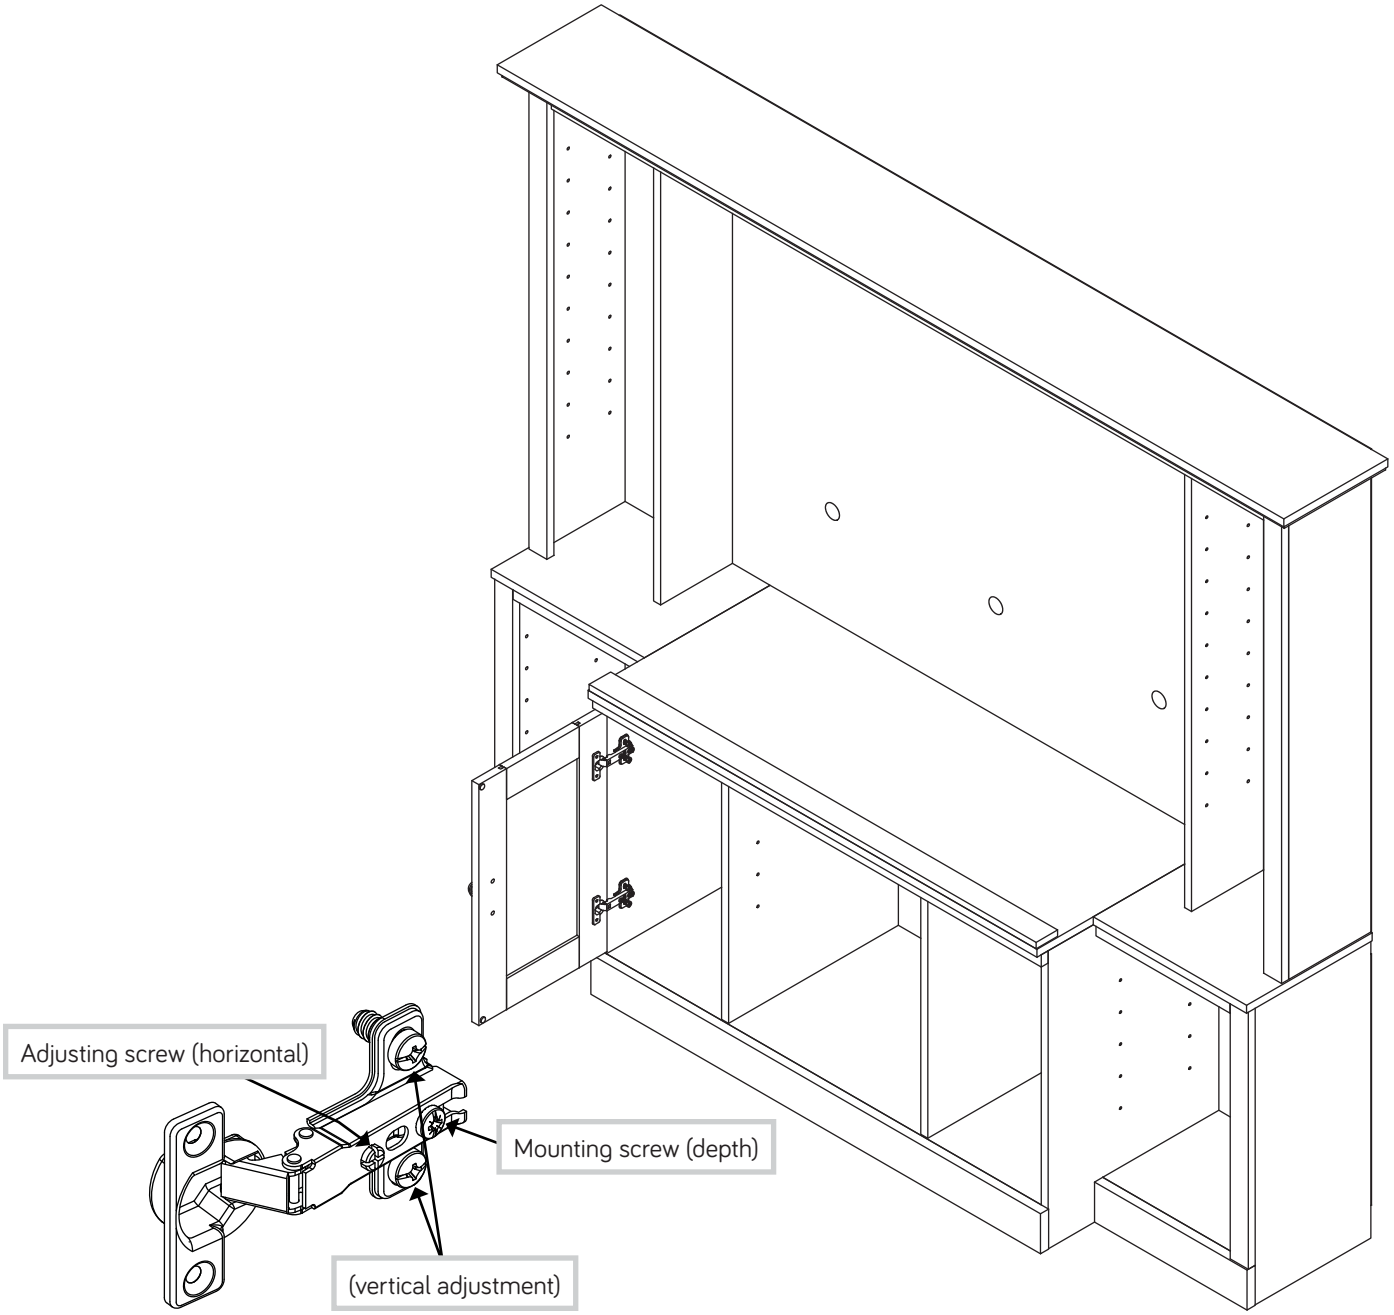

Step 23

- Push the RUBBER SLEEVES (TT) over the METAL PINS (SS). Insert the METAL PINS into the hole locations of your choice in the ENDS (A, B, C, and D) and UPRIGHTS (E, F, G, and H). Set the ADJUSTABLE SHELVES (T, U, and V) onto the METAL PINS.
- Push a CAM COVER (PP) onto each HIDDEN CAM.
- Apply the WARNING LABEL (UU) to the SHELF (L). You should be able to read the label when the TV is removed from the unit. When the TV is in place, it should hide the label. Peel off the backing and apply the label as shown in the diagram.
- NOTE: This is a permanent label intended to last for the life of the product. Once applied, do not try to remove it.

Zzz

Almost time to celebrate! With a nap.

⚠ WARNING

Never use this furniture with a TV that is too large or too heavy. Severe injury or death can occur. The TV and furniture will be unstable and may tip.

- The TV **must** weigh less than **95 lbs.**
- The base of the TV **must** be able to sit completely on this shelf.

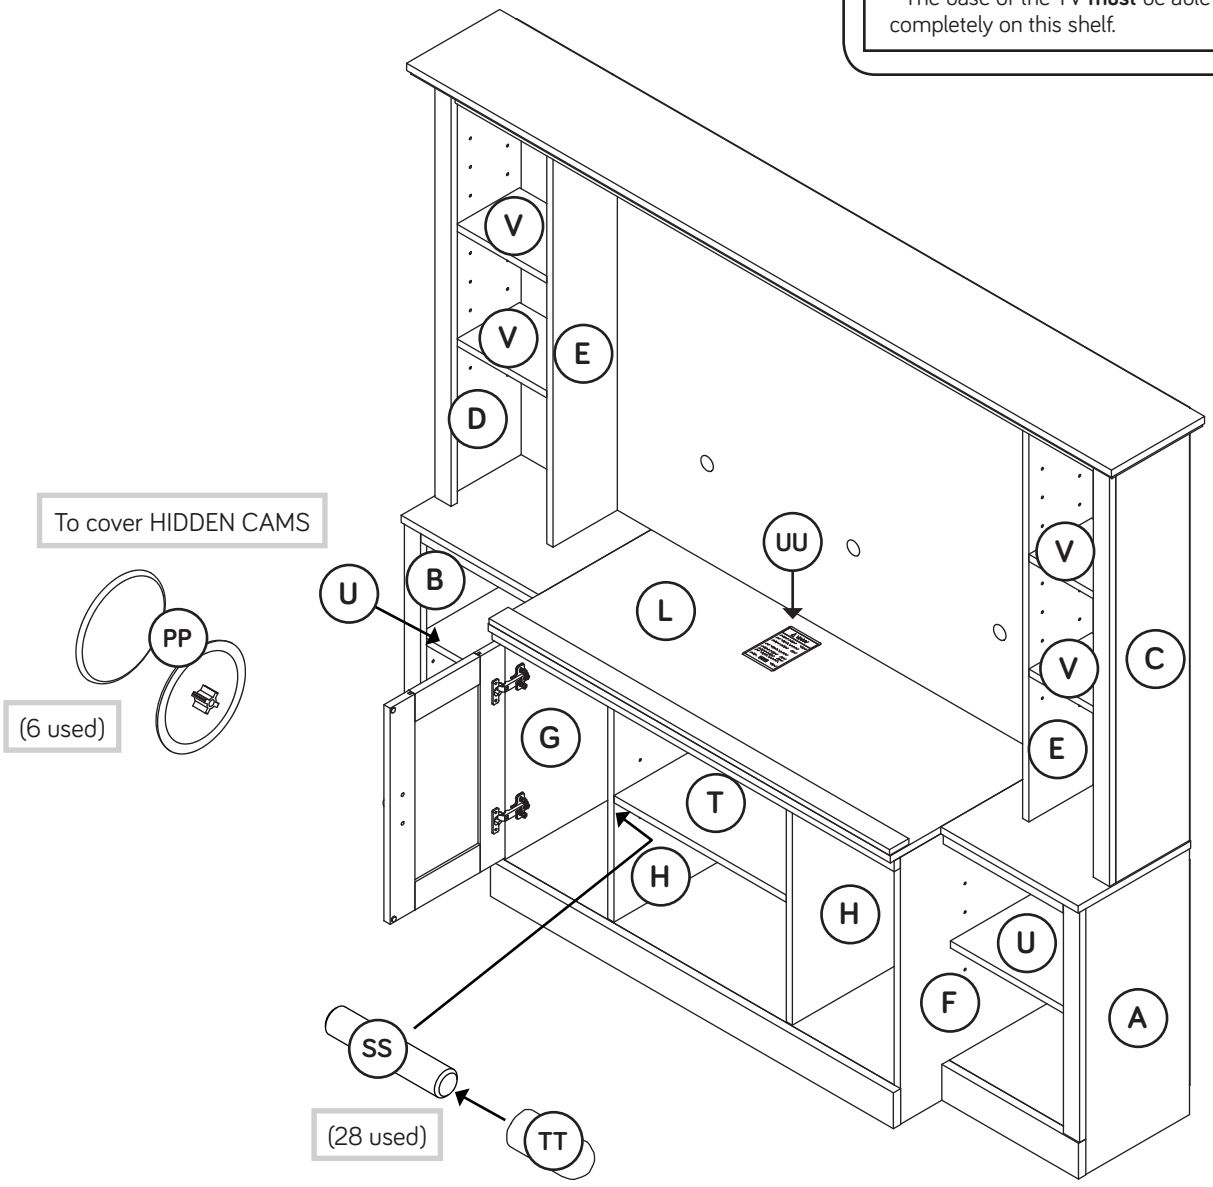

Step 24

- We recommend using the SAFETY BRACKET (JJ) for added stability. Use a BLACK 9/16" LARGE HEAD SCREW (ZZ) into the top of the unit and a BLACK 1-7/8" FLAT HEAD SCREW (VV) into a stud in your wall.
- NOTE: Please read the back page of the instruction booklet for important safety information.
- This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

And to celebrate, why not share your success story?

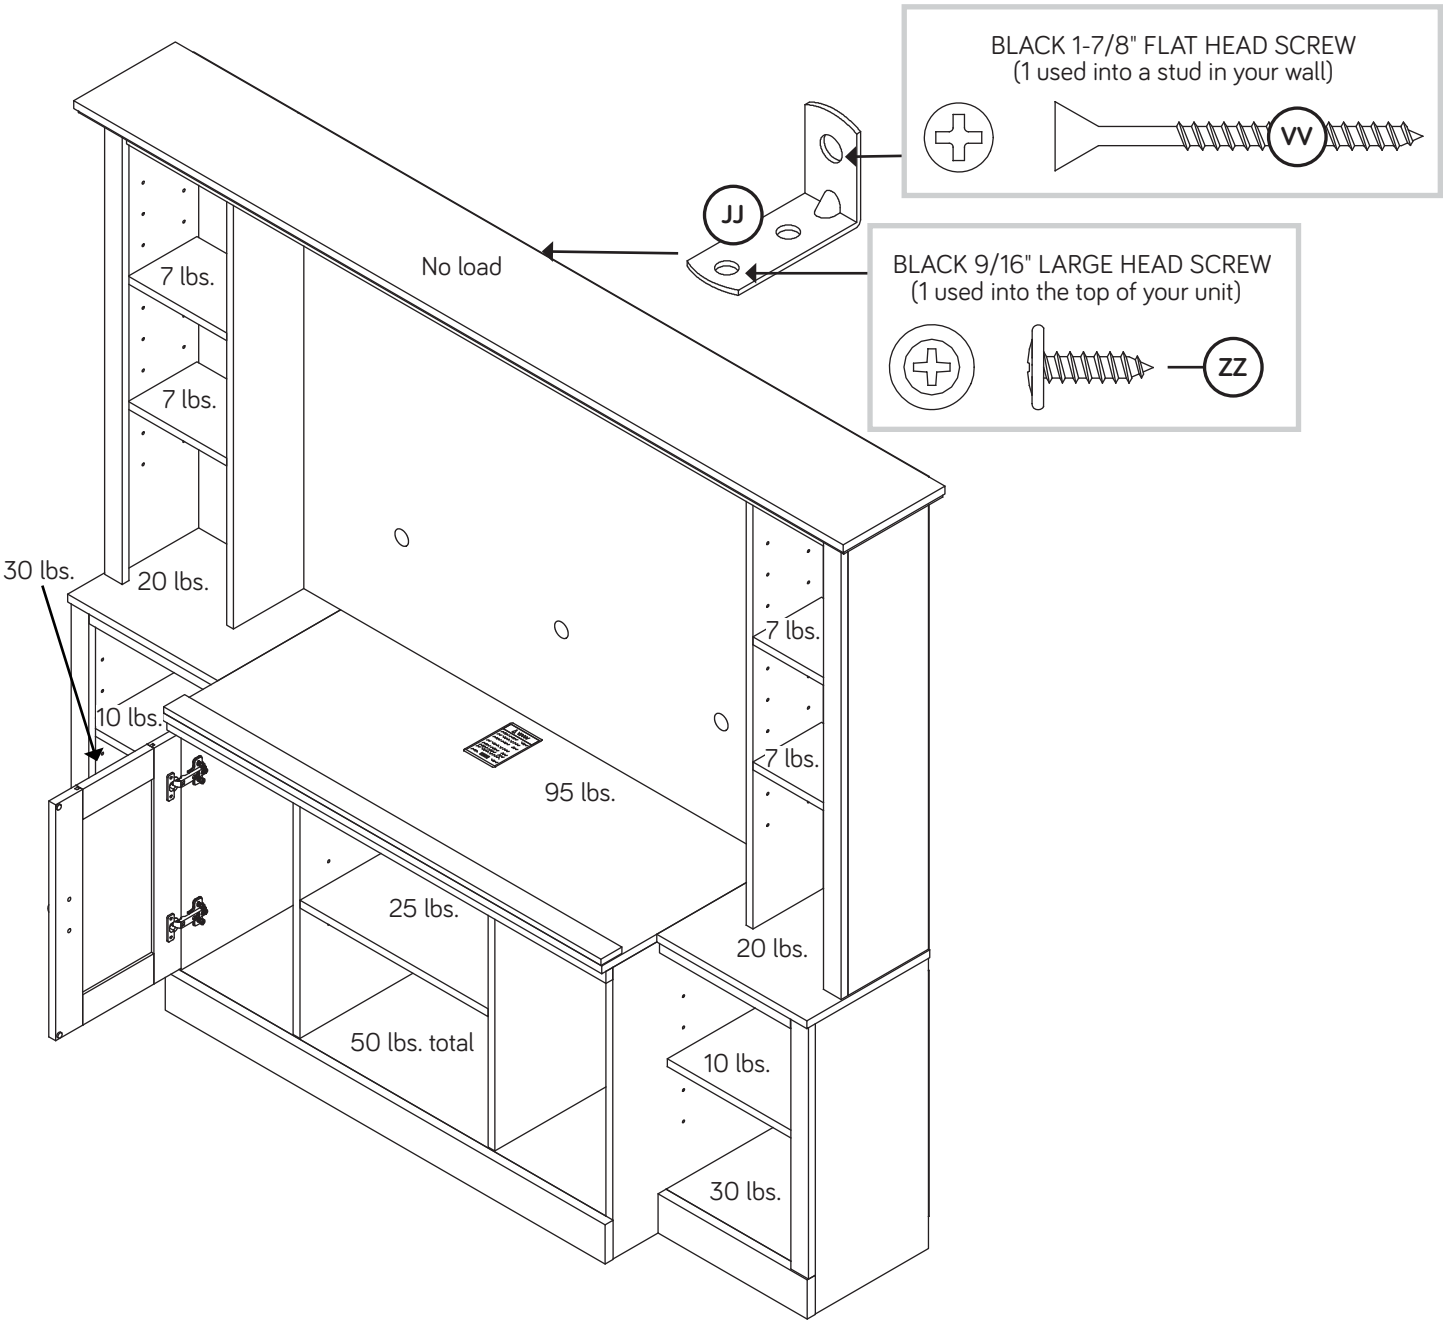

Utilisez les instructions d'assemblage en français avec les schémas étape par étape du manuel d'instruction en anglais. Chaque étape en français correspond à la même étape en anglais. La pièce devant être attachée à l'élément est représentée en gris sur les schémas de chaque étape pour plus de précision. Comparer la "Liste de pièces" ci-dessous avec la "PART IDENTIFICATION" du manuel en anglais pour vous familiariser avec les pièces avant l'assemblage.

REMARQUE : CE MANUEL D'INSTRUCTIONS CONTIENT **D'IMPORTANTES** INFORMATIONS RELATIVES À LA SÉCURITÉ. À LIRE ET CONSERVER POUR TOUTE RÉFÉRENCE FUTURE.

NOUS SOMMES LA POUR VOUS AIDER!

Nous faisons de notre mieux pour nous assurer que votre meuble arrive dans d'excellentes conditions. Nos représentants du service Clientèle sont aimables et prêts à vous aider au cas où une pièce aurait été endommagée ou manquerait (ou si vous aviez besoin d'aide pour l'assemblage). NE RAMENEZ PAS LE MEUBLE AU MAGASIN. Au Canada, composez ce numéro d'appel gratuit:

1-800-523-3987
Du lundi au vendredi, de 9 heures du matin à 5:30 heures du soir (horaire Côte Est)
(sauf jours fériés)

Si une pièce a besoin d'être remplacée, la pièce de remplacement sera envoyée dans les 48 heures. (Sauf week-ends et jours fériés)

A l'usage exclusif du Canada Noter la date d'achat de cet élément et conserver le livret pour future référence. Pour contacter Sauder en ce qui concerne cet élément, faire référence au numéro de lot et numéro de modèle en appelant notre numéro sans frais.

Lot nº : _____

Date de l'achat: _____

LISTE DE PIÈCES

REFERENCE	DESCRIPTION	QUANTITÉ
A	EXTRÉMITÉ DROITE	1
B	EXTRÉMITÉ GAUCHE	1
C	EXTRÉMITÉ DROITE DE SURMEUBLE	1
D	EXTRÉMITÉ GAUCHE DE SURMEUBLE	1
E	GRAND MONTANT	2
F	MONTANT DROIT	1
G	MONTANT GAUCHE	1
H	MONTANT CENTRAL	2
I	DESSUS	1
J	DESSUS DROIT	1
K	DESSUS GAUCHE 1	
L	TABLETTE	1
M	DESSOUS	1
N	PETIT DESSOUS	2
O2	PETIT ARRIÈRE	2
P2	GRAND ARRIÈRE	1
Q	MOULURE D'ARRÊT	1
S	PORTE	2
T	GRANDE TABLETTE RÉGLABLE	1
U	TABLETTE INFÉRIEURE RÉGLABLE	2
V	PETITE TABLETTE RÉGLABLE	4
W	PLINTHE AVANT	1
X	PLINTHE LATÉRALE	2
Y	MOULURE AVANT	1
Z	MOULURE DROITE	1
AA	MOULURE GAUCHE	1
BB	MOULURE SUPÉRIEURE	1
CC	MOULURE INFÉRIEURE	1
DD	PETITE MOULURE INFÉRIEURE	2
EE	GRANDE MOULURE D'EXTRÉMITÉ	2
FF	PETITE MOULURE D'EXTRÉMITÉ	2

LISTE DE PIÈCES

REFERENCE	DESCRIPTION	QUANTITÉ
GG2	EXCENTRIQUE ESCAMOTABLE	36
HH2	CHEVILLE D'EXCENTRIQUE	36
II	CONSOLE À ÉQUERRE	28
JJ	CONSOLE DE SÉCURITÉ	1
LL	CHARNIÈRE	4
MM	PLAQUE DE LIAISON	5
NN	CONNECTEUR DE MOULURE	2
OO	POIGNÉE	2
PP	COUVERCLE D'EXCENTRIQUE	6
QQ	PATIN	8
RR	FICHE DE TAMPONS EN FEUTRE	1
SS	GOUPILLE EN MÉTAL	28
TT	MANCHON EN CAOUTCHOUC	28
UU	ÉTIQUETTE DE MISE EN GARDE 1	
VV	VIS NOIRE TÊTE PLATE 48 mm	13
WW	VIS ARGENTÉE TÊTE GOUTTE DE SUIF 32 mm	9
XX	VIS MARRON TÊTE PLATE 25 mm	3
YY	VIS ARGENTÉE À MÉTAUX 16 mm	4
ZZ	VIS NOIRE TÊTE LARGE 14 mm	67
AAA	VIS NOIRE TÊTE PLATE 13 mm	8
BBB	CLOU	126

OUTILS D'ASSEMBLAGE REQUIS
TOURNEVIS À TÊTE CRUCIFORME PHILLIPS Nº 2 (POINTE GRANDEUR NATURE)
TOURNEVIS À POINTE DROITE
MARTEAU

ÉTAPE 1

Assembler l'élément sur un sol à moquette ou sur le carton vide pour éviter d'endommager l'élément ou le sol.

Enfoncer trente-six EXCENTRIQUES ESCAMOTABLES (GG2) dans les EXTRÉMITÉS (A et B), les EXTRÉMITÉS DE SURMEUBLE (C et D), les MONTANTS (E, F, G et H), les DESSUS (J et K) et les DESSOUS (M et N). Ensuite, insérer une CHEVILLE D'EXCENTRIQUE (HH2) dans chaque EXCENTRIQUE ESCAMOTABLE.

ÉTAPE 2

Enfoncer deux CONNECTEURS DE MOULURE (NN) dans les crans des MOULURES (Y, Z et AA).

ÉTAPE 3

Fixer les MOULURES (Y, Z et AA) au DESSUS (I). Utiliser neuf VIS ARGENTÉES TÊTE GOUTTE DE SUIF 32 mm (WW).

Fixer cinq PLAQUES DE LIAISON (MM) à la MOULURE AVANT (Y). Utiliser cinq VIS NOIRES TÊTE LARGE 14 mm (ZZ).

ÉTAPE 4

Fixer six CONSOLES À ÉQUERRE (II) aux EXTRÉMITÉS DE SURMEUBLE (C et D). Utiliser six VIS NOIRES TÊTE LARGE 14mm (ZZ).

REMARQUE : S'assurer que les chants des CONSOLES À ÉQUERRE sont à fleur des chants des EXTRÉMITÉS.

Fixer les GRANDES MOULURES D'EXTRÉMITÉ (EE) aux EXTRÉMITÉS DE SURMEUBLE (C et D). Utiliser six VIS NOIRES TÊTE LARGE 14 mm (ZZ).

REMARQUE : Les GRANDES MOULURES D'EXTRÉMITÉ ne comportent pas de trous pré-percés. Serrer les VIS dans les rainures.

ÉTAPE 5

Fixer les EXTRÉMITÉS DE SURMEUBLE (C et D) au DESSUS (I). Serrer

Risque des dégâts ou blessures. Les Excentriques Escamotables doivent être serrés à bloc. Les Excentriques Escamotables que ne sont pas serrées à par bloc peuvent desserrer et les piées peuvent séarer. Pour serrer à bloc, faire tourner l'excentrique escamotable de 210 degrés.

ÉTAPE 6

Fixer les GRANDS MONTANTS (E) au DESSUS (I). Serrer deux EXCENTRIQUES ESCAMOTABLES.

ÉTAPE 7

Fixer la MOULURE SUPÉRIEURE (BB) au DESSUS (I). Utiliser cinq VIS NOIRES TÊTE LARGE 14 mm (ZZ).

REMARQUE : La MOULURE SUPÉRIEURE ne comporte pas de trous pré-percés. Serrer les VIS dans la rainure.

ÉTAPE 8

Fixer les DESSUS (J et K) à la TABLETTE (L). Serrer six EXCENTRIQUES ESCAMOTABLES.

ÉTAPE 9

Fixer les DESSUS (J et K) aux EXTRÉMITÉS DE SURMEUBLE (C et D) et aux GRANDS MONTANTS (E). Utiliser huit VIS NOIRES TÊTE PLATE 48 mm (VV).

Fixer la MOULURE D'ARRÊT (Q) à la TABLETTE (L). Utiliser trois VIS MARRON TÊTE PLATE 25 mm (XX).

ÉTAPE 10

Fixer les MONTANTS CENTRAUX (H) à la TABLETTE (L). Serrer quatre EXCENTRIQUES ESCAMOTABLES.

ÉTAPE 11

Fixer le DESSOUS (M) aux MONTANTS CENTRAUX (H). Utiliser quatre VIS NOIRES TÊTE PLATE 48 mm (VV)

ÉTAPE 12

Maintenant, fixer les MONTANTS (F et G) à la TABLETTE (L) et au DESSOUS (M). Serrer huit EXCENTRIQUES ESCAMOTABLES.

ÉTAPE 13

Fixer les PETITS DESSOUS (N) aux MONTANTS (F et G). Serrer quatre EXCENTRIQUES ESCAMOTABLES.

ÉTAPE 14

Fixer les EXTRÉMITÉS (A et B) aux DESSUS (J et K) et aux PETITS DESSOUS (N). Serrer huit EXCENTRIQUES ESCAMOTABLES.

Enfiler les PETITES MOULURES D'EXTRÉMITÉ (FF) sur les EXTRÉMITÉS (A et B).

ÉTAPE 15

Fixer vingt CONSOLES À ÉQUERRE (II) aux EXTRÉMITÉS (A et B), aux MONTANTS (F et G), aux DESSUS (J et K), à la TABLETTE (L) et aux DESSOUS (M et N). Utiliser vingt VIS NOIRES TÊTE LARGE 14 mm (ZZ).

REMARQUE : S'assurer que les chants des CONSOLES À ÉQUERRE sont à fleur des chants des EXTRÉMITÉS, des MONTANTS et des DESSOUS.

ÉTAPE 16

Fixer la MOULURE INFÉRIEURE (CC) à la TABLETTE (L). Utiliser quatre VIS NOIRES TÊTE LARGE 14 mm (ZZ).

Fixer les PETITES MOULURES INFÉRIEURES (DD) aux DESSUS (J et K). Utiliser quatre VIS NOIRES TÊTE LARGE 14 mm (ZZ).

REMARQUE : Les PETITES MOULURES INFÉRIEURES ne comportent pas de trous pré-percés. Serrer les VIS dans les rainures.

ÉTAPE 17

Fixer la PLINTHE AVANT (W) aux MONTANTS (F et G) et au DESSOUS (M). Utiliser six VIS NOIRES TÊTE LARGE 14 mm (ZZ).

ÉTAPE 18

Fixer deux CONSOLES À ÉQUERRE (II) aux PLINTHES LATÉRALES (X). Utiliser deux VIS NOIRES TÊTE LARGE 14 mm (ZZ).

REMARQUE : Faire très attention à l'emplacement des CONSOLES À ÉQUERRE sur les PLINTHES. S'assurer que les chants des CONSOLES À ÉQUERRE sont à fleur des chants des PLINTHES.

Fixer les PLINTHES LATÉRALES (X) aux EXTRÉMITÉS (A et B), aux MONTANTS (F et G) et aux PETITS DESSOUS (N). Utiliser huit VIS NOIRES TÊTE LARGE 14 mm (ZZ).

ÉTAPE 19

À l'aide d'une autre personne, avec précaution, retourner l'élément sur ses chants avant. Déplier l'ARRIÈRE (P2) et le placer sur centre l'élément.

Veiller à avoir des marges égales le long des quatre chants de l'ARRIÈRE (P2). Si besoin est, enfoncer sur les coins opposés de l'élément pour s'assurer d'être « d'équerre ».

Fixer l'ARRIÈRE (P2) à l'élément à l'aide de cinquante--trois CLOUS (BBB).

Placer les ARRIÈRES (O2) sur l'extérieur de l'élément.

Veiller à avoir des marges égales le long des trois chants des ARRIÈRES (O2). Si besoin est, enfoncer sur les coins opposés de l'élément pour s'assurer d'être « d'équerre ». Les ARRIÈRES (O2) vont se chevaucher lARRIÈRE CENTRAL (P2).

REMARQUE : S'assurer de bien enfoncer les CLOUS dans les trous qui sont alignés sur les MONTANTS (E, F, G et H), les DESSUS (J et K) et la TABLETTE (L).

REMARQUE : Des lignes perforées ont été prévues pour accéder facilement à l'ARRIÈRE. Découper avec précaution les trous nécessaires.

Enfoncer huit PATINS (QQ) dans les EXTRÉMITÉS (A et B) et les MONTANTS (F et G).

ÉTAPE 20

Fixer deux CHARNIÈRES (LL) à chaque PORTE (S). Utiliser huit VIS NOIRES TÊTE PLATE 13 mm (AAA).

ÉTAPE 21

À l'aide de une autre personne, avec précaution, placer l'élément dans sa position verticale.

Avant de fixer la PORTE à l'unité, s'assurer que la vis de montage se trouve contre les butées comme l'indique le schéma de droite. Si ce n'est pas le cas, desserrer la vis de montage pour la faire glisser contre les butées. Serrer ensuite la vis de montage. La porte peut être ajustée à l'étape suivante.

Fixer la PORTE (S) au MONTANT GAUCHE (G). Utiliser les vis fournies avec les CHARNIÈRES. Voir l'étape suivante pour réglages.

Décoller le TAMPON EN FEUTRE de la FICHE DE TAMPONS EN FEUTRE (RR). Coller un TAMPON EN FEUTRE sur la PORTE aux endroits où celle-ci entre en contact avec le MONTANT CENTRAL (H).

Fixer une POIGNÉE (OO) à la PORTE (S). Utiliser deux VIS ARGENTÉES À MÉTAUX 16 mm (YY).

Répéter cette étape pour l'autre PORTE (S).

ÉTAPE 22

Consulter le schéma agrandi pour identifier les pièces des CHARNIÈRES et CONSOLES DE CHARNIÈRE.

Il faut peut--être ajuster les PORTES. Suivre les indications ci--dessous pour ajuster.

RÉGLAGES DES PORTES :
Pour ajuster la PORTE latéralement (horizontalement), desserrer la vis de montage quelques tours et tourner la vis de réglage vers l'intérieur ou vers l'extérieur. Serrer la vis de montage après avoir ajusté.

Pour ajuster les PORTES de haut en bas (verticalement), desserrer les deux vis qui maintiennent les CONSOLES DE CHARNIÈRE à l'EXTRÉMITÉ. Déplacer les PORTES verticalement à l'emplacement désiré. Serrer les vis après avoir ajusté.

Pour ajuster les PORTES vers l'intérieur où vers l'extérieur (profondeur), desserrer la vis de montage un tour et déplacer les PORTES vers l'intérieur ou vers l'extérieur. Serrer la vis de montage après avoir ajusté.

ÉTAPE 23

Enfoncer les MANCHONS EN CAOUTCHOUC (TT) sur les GOUPILLES EN MÉTAL (SS). Insérer les GOUPILLES EN MÉTAL dans les trous choisis dans les EXTRÉMITÉS (A, B, C et D) et les MONTANTS (E, F, G et H). Poser les TABLETTES RÉGLABLES (T, U et V) sur les GOUPILLES EN MÉTAL.

Enfoncer un COUVERCLE D'EXCENTRIQUE (PP) sur chaque EXCENTRIQUE ESCAMOTABLE.

Apposer l'ÉTIQUETTE DE MISE EN GARDE (UU) sur la TABLETTE (L). Cette étiquette doit pouvoir être lisible lorsque le téléviseur est enlevé de l'élément. Lorsque le téléviseur est en place, il doit la dissimuler. Décoller le film protecteur et apposer l'étiquette comme l'indique le schéma.

REMARQUE : Cette étiquette permanente est prévue pour durer pendant toute la vie du produit. Une fois apposée ne pas essayer de la retirer.

ÉTAPE 24

Il est recommandé d'utiliser la CONSOLE DE SÉCURITÉ (JJ) pour renforcer la stabilité. Utiliser une VIS NOIRE TÊTE LARGE 14 mm (ZZ) dans le haut de l'élément et une VIS NOIRE TÊTE PLATE 48 mm (VV) dans un poteau mural.

REMARQUE : Prière de lire attentivement les importantes informations concernant la sécurité qui figurent sur la couverture arrière du manuel d'instructions.

Ceci complète l'assemblage. Pour nettoyer, utiliser l'encaustique pour meubles préférée ou un chiffon humide. Essuyer.

⚠ WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. ***Carefully read the following chart.***

Look out for:	What can happen:	How to avoid the problem:
• Children climbing on furniture. • A child may try to reach a toy or other object by climbing on furniture. • Children will play and be active near the TV.	• Risk of injury or death. • A child climbing on a piece of furniture can make it top-heavy and cause it to tip over. • A child playing with a TV can cause it to tip over.	• Never allow children to climb on or play with furniture. • Do not place toys, food, etc. on the top shelves or upper drawers. Children may try to climb to reach them out of curiosity.
• Improper use of furniture to support TVs. • Furniture designed for use with TVs will specify the maximum weight rating and recommended size of the TVs it will safely support.	• Risk of injury or death. • TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward. • Furniture items such as general-purpose utility carts, tables, or dressers may become unstable and tip if a TV is set on them.	• A TV must only be set on furniture specifically designed to support a television. • Never use a TV that exceeds the weight ratings or size guidelines specified for the furniture.
• Overloaded shelves.	• Risk of injury. • Top-heavy furniture can tip over. • Overloaded shelves can break.	• Never exceed the weight limits shown in the instructions. • Work from bottom to top when loading shelves. • Place the heavier items on the lower shelves.
• Improperly moving furniture that is not designed and equipped with casters.	• Furniture can tip over or break if improperly moved. • Physical injury. Furniture can be very heavy.	• Unload shelves from top to bottom before moving the furniture. • Do not push furniture, especially on a carpeted floor. Have a friend help you lift the item and set it in place.

⚠ AVERTISSEMENT

Prière d'utiliser le mobilier à bon escient et avec prudence. Une mauvaise utilisation peut être à l'origine de risques d'accident ou peut endommager le mobilier et les articles ménagers. ***Lire attentivement le tableau suivant.***

À surveiller :	Danger éventuel :	Solution :
• Les enfants qui grimpent sur le mobilier. • Un enfant peut grimper sur le mobilier pour essayer d'attraper un jouet ou tout autre objet. • Les enfants jouèrent et sont actifs à proximité du téléviseur.	• Risque de blessures graves, voire mortelles. • Un enfant qui grimpe sur un meuble risque de déséquilibrer ce dernier et de le faire tomber. • Un enfant qui joue avec un téléviseur risque de provoquer le renversement de ce dernier.	• Ne jamais laisser les enfants grimper sur le mobilier ou jouer avec. • Ne pas placer de jouets, d'aliments, etc. sur les tablettes supérieures ou les tiroirs supérieurs. Les enfants risquent d'essayer de grimper pour les atteindre, par simple curiosité.
• Mauvaise utilisation du mobilier que supporte les téléviseurs. • Les meubles conçus pour être utilisés avec des téléviseurs comporteront une indication concernant le poids nominal maximum et la taille recommandée des téléviseurs qu'ils peuvent supporter en toute sécurité.	• Risque de blessures graves, voire mortelles. • Les téléviseurs peuvent être très lourd. De plus, le poids et l'emplacement du tube image ont tendance à rendre les téléviseurs instables et enclins à tomber vers l'avant. • Les meubles tels que les dessertes à tout usage, les tables ou les commodes risquent de se renverser si on pose un téléviseur dessus.	• Un téléviseur ne doit être posé que sur du mobilier spécifiquement conçu à cet effet. • Ne jamais dépasser la capacité de taille et de poids maximum de téléviseur admissible.
• Tablettes surchargées.	• Risque de blessure. • Du mobilier mal équilibré risque de se renverser. • Des tablettes surchargées risquerait de casser.	• Ne jamais excéder les limites de poids indiquées dans les instructions. • Pour charger les tablettes, commencer par remplir celui du bas pour finir par celui du haut. • Placer les articules plus lourds sur les tablettes inférieures.
• Déplacement inadéquat d'un mobilier qui n'est pas conçu pour avoir des roulettes et n'en est pas équipé.	• Le mobilier risque de se renverser ou de casser en cas de déplacement inadéquat. • Blessure physique. Le mobilier peut être très lourd.	• Décharger les tablettes en commençant par celui du haut avant de déplacer le mobilier. • Ne pas pousser le mobilier, surtout sur la moquette. Se faire aider par une autre personne pour soulever l'élément et le mettre en place.

5-YEAR LIMITED WARRANTY

1. Sauder Woodworking Co. (Sauder®) provides limited warranty coverage to the original purchaser of this product for a period of five years from the date of purchase against defects in materials or workmanship of Sauder furniture components. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
2. There is no warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, or care. There is also no warranty coverage for rented products or any products purchased "used" or "as is", at a distress or going-out-of business sale, or from a liquidator.
3. As the exclusive remedy under this Warranty, Sauder will (at its sole option) repair or replace any defective furniture component. Sauder may require independent confirmation of the claimed defect and proof of purchase. Replacement parts will be warranted for only the remaining period of the original Warranty. SAUDER SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS WARRANTY, such as loss of use, disassembly, transportation, labor or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
4. This Warranty applies only to warranted defects that first arise and are reported to Sauder within the warranty coverage period. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.
5. THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Sauder and all implied warranties, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you.
6. For Warranty inquiries or claims, please visit our website www.sauder.com. You can also contact Sauder at 1-800-523-3987. Sauder may require Warranty claims to be submitted in writing to Sauder Woodworking Co., 502 Middle Street, Archbold, OH 43502 USA. Please include your sales receipt or other proof of purchase and a specific description of the product defect.

GARANTIE LIMITÉE DE 5 ANS

1. Sauder Woodworking Co. (Sauder®) offre une couverture de garantie limitée à l'acheteur initial du présent produit pendant une période de cinq ans à compter de la date d'achat contre tout défaut de matériaux ou de fabrication des composantes de mobilier Sauder. Le mot « défaut », tel qu'il est utilisé sous les termes de la présente garantie, comprend les imperfections des pièces qui empêchent substantiellement l'utilisation du produit. La présente garantie vous donne des droits légaux spécifiques et il est possible que vous ayez des droits supplémentaires variant d'État en État ou de province en province.
2. La présente garantie ne saurait couvrir les défauts ou conditions qui surviendraient à la suite du non respect des instructions, informations ou mises en garde de montage, d'une mauvaise utilisation ou d'un abus, d'un dommage intentionnel, d'un incendie, d'une inondation, d'une altération ou modification du produit, d'une utilisation du produit allant à l'encontre de son usage prévu, ni aucune condition résultant d'une maintenance, d'un nettoyage ou d'un entretien inappropriés ou inadéquats. De plus, il n'existe aucune garantie pour les produits loués ou tous les produits achetés « d'occasion » ou « en l'état », dans le cadre d'une vente aux enchères ou de solde pour cessation de commerce, ou auprès d'un liquidateur.
3. En tant que recours exclusif en vertu de la présente garantie, Sauder réparera ou remplacera (sur sa seule décision) toute composante de mobilier défectueuse. Sauder peut exiger une confirmation indépendante du défaut revendiqué ainsi qu'une preuve d'achat. Les pièces de rechange seront garanties uniquement pendant la période restante de la garantie originale. SAUDER NE SERA EN AUCUN CAS RESPONSABLE de TOUT DOMMAGE ACCESSOIRE OU CONSÉCUTIF DE TOUTE SORTE et lesdits dommages sont EXCLUS DE LA PRÉSENTE GARANTIE, à savoir perte d'utilisation, démontage, transport, main d'œuvre ou dommages matériels sur ou à proximité du produit. Certains États ou provinces ne permettant pas l'exclusion ou la limite aux responsabilités pour dommages accidentels ou consécutifs, la limite ou l'exclusion ci-dessus peut ne pas être applicable.
4. La présente garantie ne s'applique qu'aux défauts garantis qui se produisent pour la première fois et qui sont signalés à Sauder dans les limites de ouverture de la garantie. La garantie ne peut pas être transférée à des propriétaires ou utilisateurs subséquents du produit, et sera immédiatement invalidée dans le cas où le produit est revendu, transféré, loué sous bail ou loué à une tierce partie ou personne autre que l'acheteur original.
5. IL N'EXISTE AUCUNE AUTRE GARANTIE EN VIGUEUR POUR LE PRÉSENT PRODUIT. En vertu des lois de certains États ou provinces, il ne peut y avoir de garanties implicites de la part de Sauder et toutes les garanties implicites, Y COMPRIS TOUTE GARANTIE IMPLICITE DE COMMERCIABILITÉ OU D'ADAPTATION À UN USAGE PARTICULIER sont déclinées partout où la loi l'autorise. DANS LA MESURE OÙ TOUTE GARANTIE IMPLICITE EST APPLICABLE, TOUTE GARANTIE IMPLICITE, Y COMPRIS TOUTE GARANTIE DE COMMERCIABILITÉ OU D'ADAPTATION À UN USAGE PARTICULIER, EST LIMITÉE À LA DURÉE DE LA PRÉSENTE GARANTIE EXPRESSE ou à la période minimum autorisée par la loi, la période la plus courte étant retenue. Certains États ne permettant pas que des limites soient imposées quant à la durée d'une garantie implicite, la limite ci-dessus peut donc ne pas être applicable.
6. Pour toute question concernant la garantie ou toute demande de réclamation, consulter le site Web www.sauder.com. Il est également possible de contacter Sauder en composant le 1-800-523-3987. Sauder peut exiger de soumettre les demandes de réclamation sous garantie par écrit à Sauder Woodworking Co., 502 Middle Street, Archbold, OH 43502 USA. Veuillez joindre votre ticket de caisse ou toute autre preuve d'achat ainsi qu'une description spécifique du défaut de produit.

Dear Valued Customer:

Thanks so much for choosing Sauder® furniture. I hope the purchase and assembly process was a positive experience and you feel good about the furniture you just built. If you need assistance or want to learn more, please contact our award-winning, Ohio-based customer service team at 800-523-3987 or Sauder.com.

My grandfather, Erie Sauder, founded the company in 1934 and later invented and patented the first commercially successful ready-to-assemble tables. We strive to hold true to his core values of innovation, integrity, servanthood and stewardship.

Sauder products are made with environmentally responsible materials and world-class manufacturing processes. Our 2,000+ dedicated employees in Archbold, Ohio, along with our global manufacturing partners, are committed to providing you furniture with great value, style and quality.

From our family to you. Enjoy!

Kevin J. Sauder
President/CEO

So, how did it go?

Set a world record for speed? Feeling good about yourself? Nice. Get social with it on any of these quality share sites.

And don't forget to rate and review your piece at Sauder.com in the product detail page.

Register your new product online

For immediate service, our website is available 24 hours per day, seven days per week, to order replacement parts, access assembly tips, register your product and view Sauder products. www.sauder.com

Customer Services in United States and Canada
Monday through Friday – 9 a.m. to 5:30 p.m. ET
(except holidays) 1-800-523-3987

General Conformity Certificate

1. This certificate applies to the Sauder Woodworking Product identified by this Instruction Book.
2. This certificate applies to compliance of this product with the CPSC Ban on Lead-Containing Paint (16 CFR 1303).
3. This product is manufactured by:

   Sauder Woodworking Company
   502 Middle St.
   Archbold, OH 43502
   419-446-2711
4. Date of Manufacture: **August 2015**

SAUDER®

Made in USA
with U.S. and imported materials